

System Outline

Key Reminder System

With the ignition key inserted in the key cylinder (Unlock warning SW on), the ignition SW still off and driver's door open (Door courtesy SW on), when a signal is input to TERMINAL (B) 23 of the body ECU, the body ECU operates, current flows from TERMINAL (C) 15 of the ECU to TERMINAL (B) 19 of the combination meter to GROUND and key reminder buzzer sounds.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B5	B	36	J5		38	J15	B	38
B6	C	36	J7		38	J18	A	38
C9	B	37	J8	A	38	J19	B	38
C10	C	37	J9	B	38	K3		39
D12		40	J14	A	38			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block
IG	46	Left Kick Panel