

## 2007 4Runner 5,000 Miles - 6 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 10,000 Miles - 12 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 15,000 Miles - 18 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>2</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 20,000 Miles - 24 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 25,000 Miles - 30 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 30,000 Miles - 36 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace spark plugs<sup>2</sup>
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>3</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>5</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace manual transmission oil
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 3) If equipped with active height control. Initial inspection at 30,000 miles/36 months; inspect every 15,000 miles/18 months thereafter.
- 4) Inspect thickness measurement and disc runout.
- 5) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 35,000 Miles - 42 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 40,000 Miles - 48 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.



## 2007 4Runner 45,000 Miles - 54 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>2</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 50,000 Miles - 60 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 55,000 Miles - 66 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 60,000 Miles - 72 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace spark plugs<sup>2</sup>
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Lubricate propeller shaft (4WD)
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>3</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Charcoal canister<sup>5</sup>
  - \_\_\_ Drive belts<sup>6</sup>
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>7</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 3) If equipped with active height control.
- 4) Inspect thickness measurement and disc runout.
- 5) Applies to 4Runners with 2UZ-FE. Required only for vehicles in California, Massachusetts, and New York.
- 6) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 7) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 65,000 Miles - 78 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 70,000 Miles - 84 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 75,000 Miles - 90 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>2</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 80,000 Miles - 96 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.



## 2007 4Runner 85,000 Miles - 102 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 90,000 Miles - 108 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace spark plugs<sup>2</sup>
- q Replace timing belt<sup>3</sup>
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>4</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>5</sup>
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>6</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace manual transmission oil
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 3) Applies to 4Runner with 2UZ-FE.
- 4) If equipped with active height control.
- 5) Inspect thickness measurement and disc runout.
- 6) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 95,000 Miles - 114 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 100,000 Miles - 120 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine coolant<sup>2</sup>
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more details.

## 2007 4Runner 105,000 Miles - 126 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>2</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

## 2007 4Runner 110,000 Miles - 132 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 115,000 Miles - 138 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

#### **Driving on Salted Roads**

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

## 2007 4Runner 120,000 Miles - 144 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace spark plugs<sup>2</sup>
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Lubricate propeller shaft (4WD)
- q Inspect the following:
  - \_\_\_ Active height control gas chamber<sup>3</sup>
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Charcoal canister<sup>5</sup>
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots (4WD)
  - \_\_\_ Engine coolant<sup>6</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil (4WD)
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and/or intercooler
  - \_\_\_ Rear differential oil
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transfer case oil (4WD)
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

#### **Driving on Dirt Roads or Dusty Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Required under the terms of the Emission Control Warranty. For important model-specific information, see Maintenance Definitions (Spark Plugs) for details.
- 3) If equipped with active height control.
- 4) Inspect thickness measurement and disc runout.
- 5) Applies to 4Runners with 2UZ-FE. Required only for vehicles in California, Massachusetts, and New York.
- 6) See Maintenance Definitions (Engine Coolant) for details.