



Front Fog Light

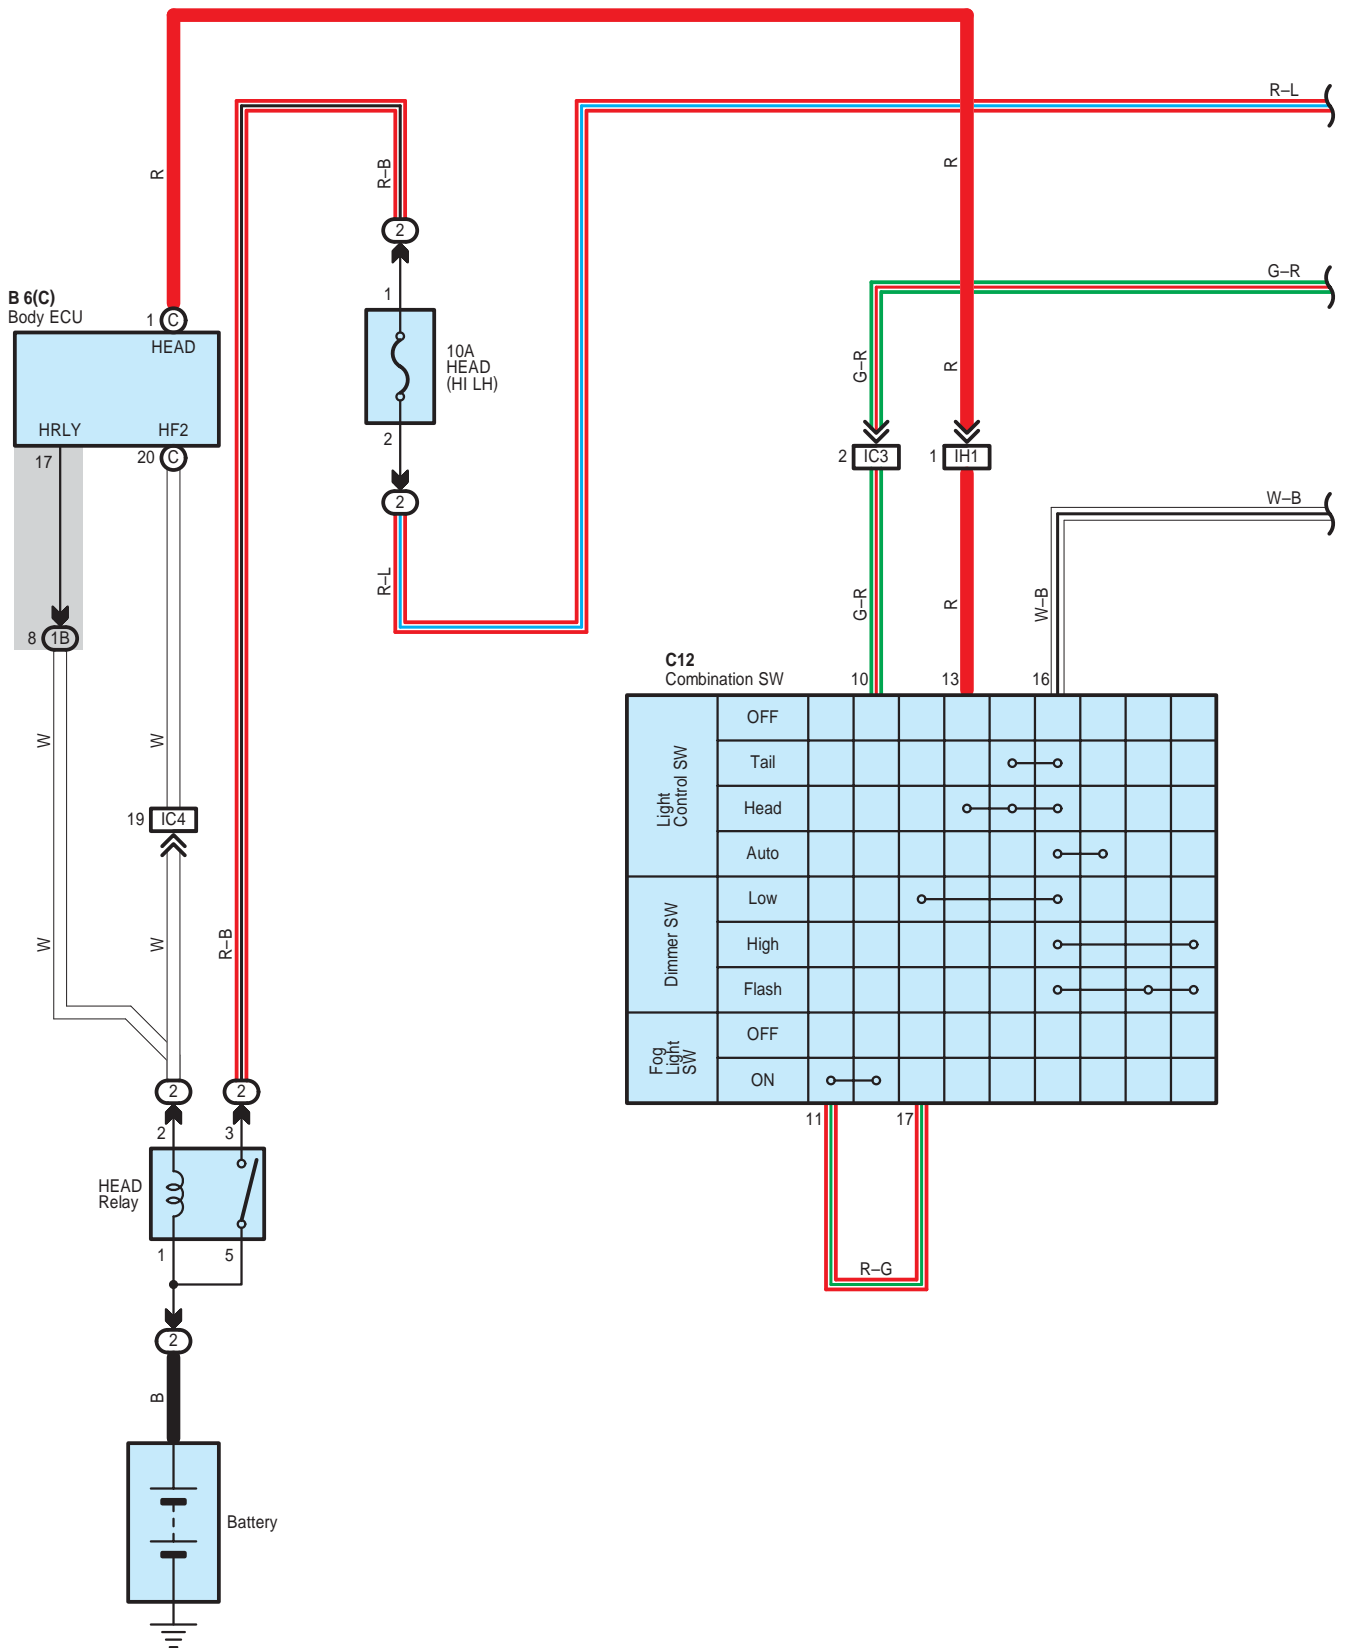

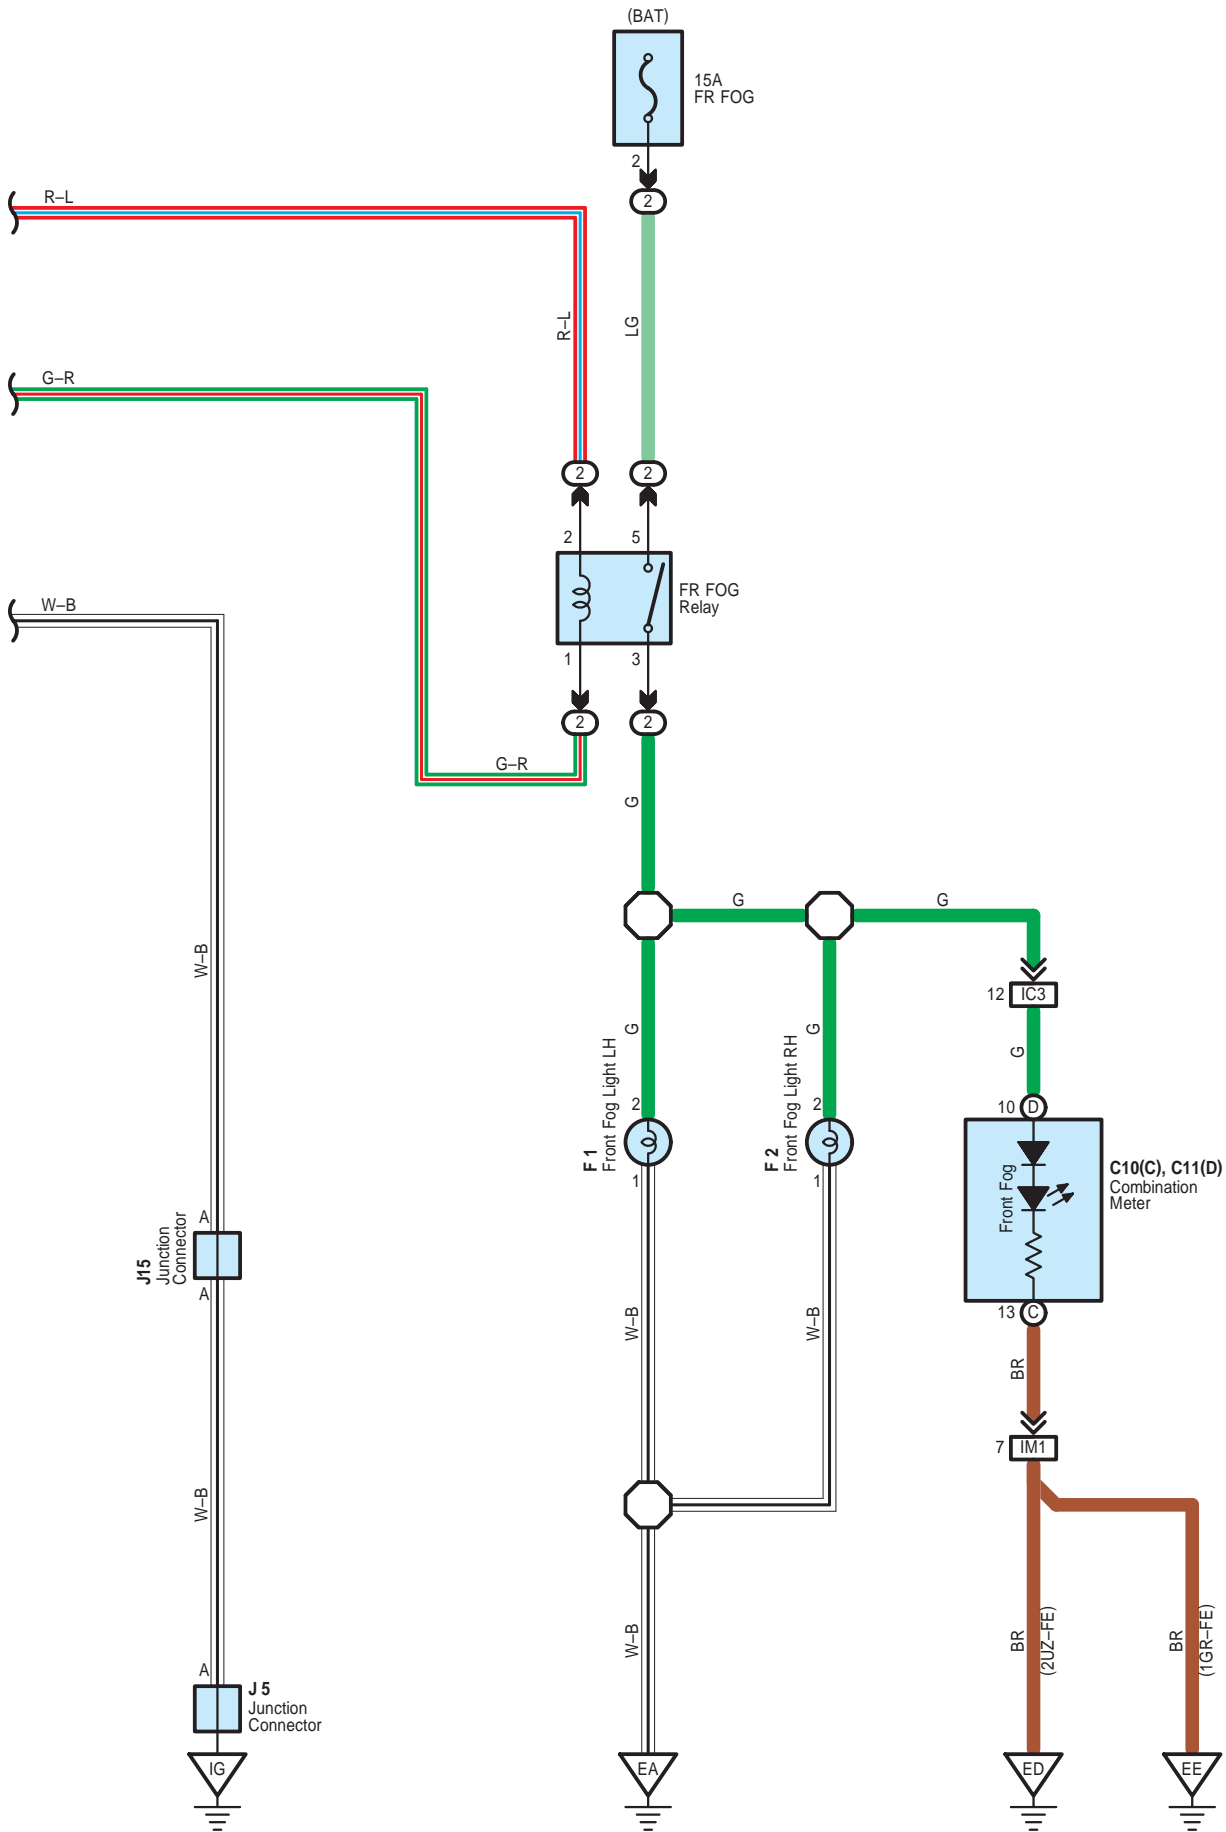

Front Fog Light

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B6	C	36	F1	32 (2UZ-FE)	J5	38
C10	C	37		34 (1GR-FE)	J15	38
C11	D	37	F2	32 (2UZ-FE)		
C12		37		34 (1GR-FE)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IC4		
IH1	46	Instrument Panel Wire and Instrument Panel Wire (Behind the Combination Meter)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	44 (2UZ-FE)	Front Right Fender
	45 (1GR-FE)	
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block
IG	46	Left Kick Panel

