



Setting Up Your Monitor

Paramétrer votre moniteur | Instalación del monitor | Configurar o monitor |
Inbetriebnahme des Monitors | Configurazione del monitor | Instalacja monitora

**CAUTION:**

Before you set up and operate your Dell monitor, see the safety instructions in your monitor *Product Information Guide*.

MISE EN GARDE :

Avant d'installer et d'utiliser votre écran Dell, veuillez vous référer aux consignes de sécurité données dans le "Guide des Informations du Produit" de votre moniteur.

PRECAUCIÓN:

Antes de configurar y utilizar el monitor Dell, consulte las instrucciones de seguridad contenidas en la "Guía de información del producto" que acompaña al monitor.

ATENÇÃO:

Antes de instalar e utilizar o seu monitor Dell, consulte as normas de segurança no "Guia de informação do produto" do seu monitor.

ACHTUNG:

Bevor Sie Ihren Dell-Monitor einrichten und in Betrieb setzen, lesen Sie die "Sicherheitshinweise in der Produktanleitung" Ihres Monitors.

ATTENZIONE:

Prima di installare e utilizzare il monitor Dell, leggere le norme di sicurezza sull'uso del monitor "Guida informativa al prodotto".

OSTRZEŻENIE:

Przed wykonaniem ustawień i rozpoczęciem używania monitora Dell należy przeczytać instrukcje bezpieczeństwa w "Podręczniku informacji o produkcie" monitora.

Dell™ 3008WFP Flat Panel Monitor

NOTE: The optimal resolution is 1920x1200 at 60Hz for VGA input and 2560x1600 at 60Hz for DVI input.

NOTE: To obtain the optimal resolution with DVI input, ensure that the graphics card is a dual link DVI card that supports the optimal resolution. Some graphics cards with multiple ports have only one dual link port. For more information, see the documentation for your graphics card.

REMARQUE : La résolution optimale est 1920x1200 avec 60Hz pour l'entrée VGA et 2560x1600 avec 60Hz pour l'entrée DVI.

REMARQUE : Pour obtenir la résolution optimale avec l'entrée DVI, assurez-vous que la carte graphique est une carte DVI double accès qui supporte la résolution optimale. Certaines cartes graphiques avec plusieurs ports peuvent ne posséder qu'un port double accès. Pour plus d'informations, consulter la documentation de votre carte graphique.

NOTA: La resolución óptima es de 1920x1200 a 60Hz para entradas VGA y 2560x1600 a 60Hz para entradas DVI.

NOTA: Para obtener la resolución óptima con una entrada DVI, asegúrese de que la tarjeta gráfica es una tarjeta DVI con enlace dual compatible con la resolución óptima. Algunas tarjetas gráficas con varios puertos sólo tienen un puerto de enlace dual. Para más información, consulte la documentación de su tarjeta gráfica.

NOTA: A resolução óptima é de 1920x1200 a 60 Hz para entrada VGA e de 2560x1600 a 60 Hz para entrada DVI.

NOTA: Para obter uma ótima resolução através da entrada DVI, certifique-se de que a placa gráfica é uma placa DVI de dupla ligação e que suporta uma ótima resolução. Algumas placas gráficas com várias portas podem ter apenas uma porta ativada para uma ligação dupla. Para mais informações, consulte a documentação da sua placa gráfica.

HINWEIS: Die optimale Auflösung beträgt 1920 x 1200 bei 60 Hz am VGA-Eingang, 2560 x 1600 bei 60 Hz am DVI-Eingang.


HINWEIS: Um die optimale Auflösung am DVI-Eingang zu erreichen, achten Sie darauf, dass es sich bei der Grafikkarte um eine Dual Link DVI-Karte handelt, welche die optimale Auflösung unterstützt. Manche Grafikkarten mit mehreren Anschlüssen verfügen lediglich über einen Dual Link-Port. Weitere Informationen finden Sie in der Dokumentation Ihrer Grafikkarte.

NOTA: La risoluzione ottimale è di 1920x1200 a 60Hz per l'input VGA e di 2560x1600 a 60Hz per l'input DVI.


NOTA: Per ottenere la risoluzione ottimale con l'input DVI. Assicurarsi che la scheda video sia una scheda Dual Link DVI che supporta la risoluzione ottimale. Alcune schede video con più porte hanno solo una porta Dual Link. Per altre informazioni, fare riferimento alla documentazione della scheda video.

UWAGA: Optymalna rozdzielczość to 1920x1200 przy 60Hz dla wejścia VGA i 2560x1600 przy 60Hz dla wejścia DVI.

UWAGA: W celu uzyskania optymalnej rozdzielczości dla wejścia DVI należy sprawdzić, czy karta graficzna jest kartą DVI dual link, obsługującą optymalną rozdzielczość. Niektóre karty graficzne z wieloma portami mają wyłącznie jeden port dual link. Dalsze informacje można uzyskać w dokumentacji karty graficznej.

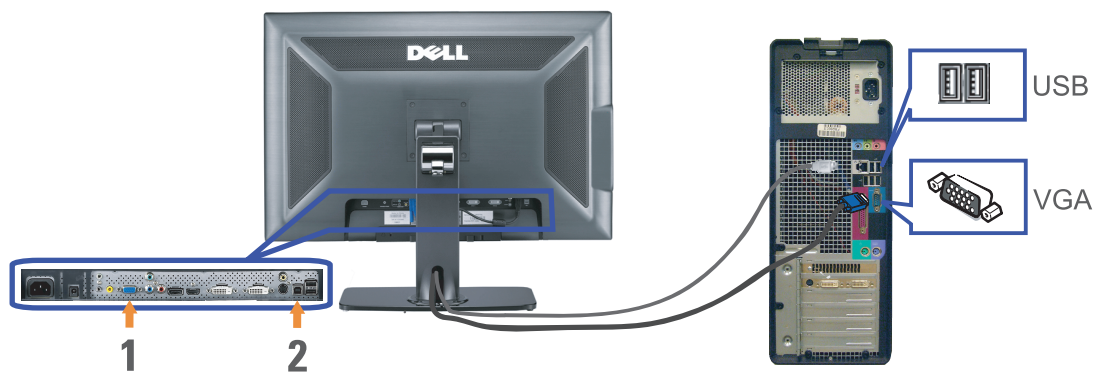**OR**

ou
o
ou
oder
e
lub

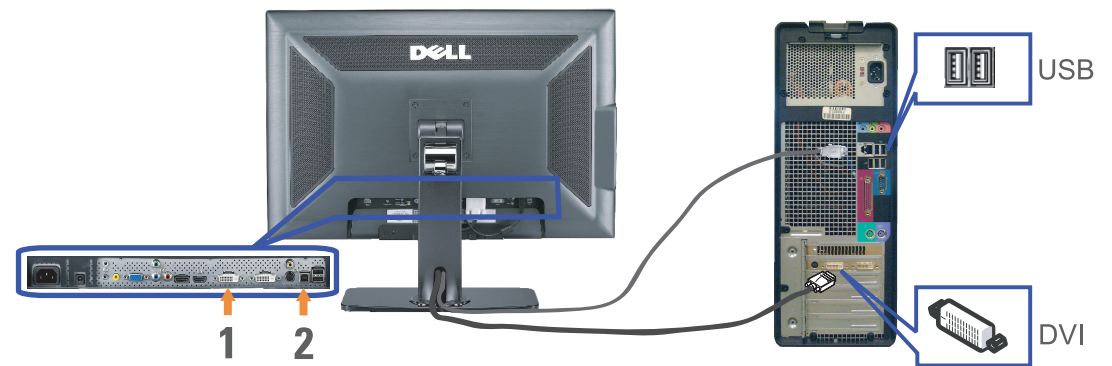**1**

Connect the monitor using EITHER the white DVI cable OR the blue VGA cable (DO NOT connect both cables to the same computer).

Branchez le moniteur en utilisant SOIT le câble DVI blanc SOIT le câble VGA bleu (ne branchez PAS les deux câbles sur le même ordinateur).

Conecte el monitor usando O el cable DVI blanco O el cable VGA azul. (NO conecte ambos cables al mismo ordenador).

Conecte o monitor usando o cabo DVI branco OU o cabo VGA azul (NÃO conecte ambos os cabos ao mesmo computador).

Schließen Sie den Monitor ENTWEDER über das weiße DVI-Kabel ODER das blaue VGA-Kabel an (schließen Sie NICHT beide Kabel an den Computer an).

Collegare il monitor usando O il cavo DVI di colore bianco O il cavo VGA di colore blu (NON collegare entrambi i cavi allo stesso computer).

Podłącz monitor białym kablem DVI lub niebieskim kablem VGA (NIE należy podłączać dwóch kabli do tego samego komputera).

2

Connect the USB cable to the computer.

Connectez le câble USB à votre ordinateur.

Conecte el cable USB al equipo.

Ligue o cabo USB ao computador.

Schließen Sie das USB-Kabel an den Computer an.

Collegare il cavo USB al computer.

Podłącz do komputera kabel USB.

3

Connect the power cord firmly to the monitor and the electrical outlet.

Connectez fermement le cordon d'alimentation au moniteur et à une prise murale.

Conecte el cable de alimentación firmemente al monitor y a la toma de corriente.

Ligue o cabo de alimentação ao monitor e à tomada elétrica.

Schließen Sie die Netzleitung ordnungsgemäß an den Monitor und eine Steckdose an.

Collegare bene il cavo di alimentazione al monitor e alla presa elettrica.

Podłącz pewnie przewód zasilający do monitora i gniazdka.

4

Turn on the monitor(a). If nothing appears on the screen, press the *Input Select* button(b).

Rallumez le moniteur(a). Si aucune image n'apparaît sur l'écran, appuyez sur le bouton Sélection d'Entrée (b).


Encienda el monitor(a). Si no aparece nada en la pantalla, pulse el botón Selección de entrada (b).

Ligue o monitor(a). Se não aparecer nada no ecrã, prima o botão seleção de entrada (b).

Schalten Sie den Monitor ein (a). Wenn nichts auf dem Bildschirm erscheint, drücken Sie bitte die Eingangsauswahl-Taste (b).

Accendere il monitor(a). Se sullo schermo non appare nulla, premere il tasto Seleziona ingresso (b).


Włącz monitor (a). Jeśli nic nie wyświetli się na ekran naciśnij przycisk Wybór wejścia (b).

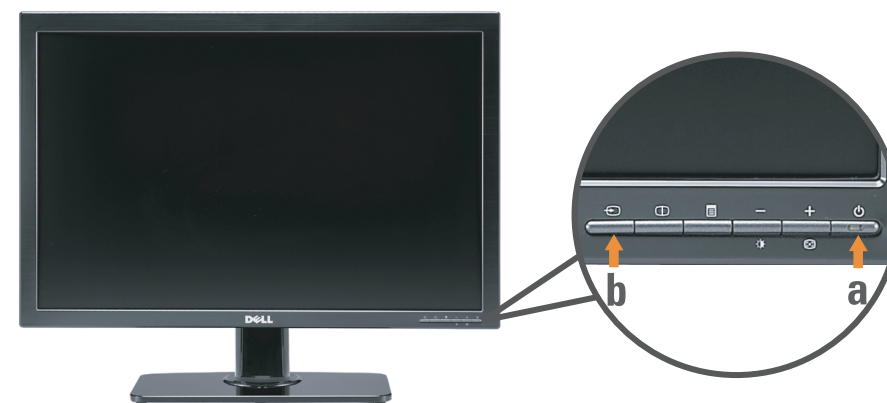

46.7A2C7.101
(Dell Part No.HR373 A01)

www.dell.com | support.dell.com



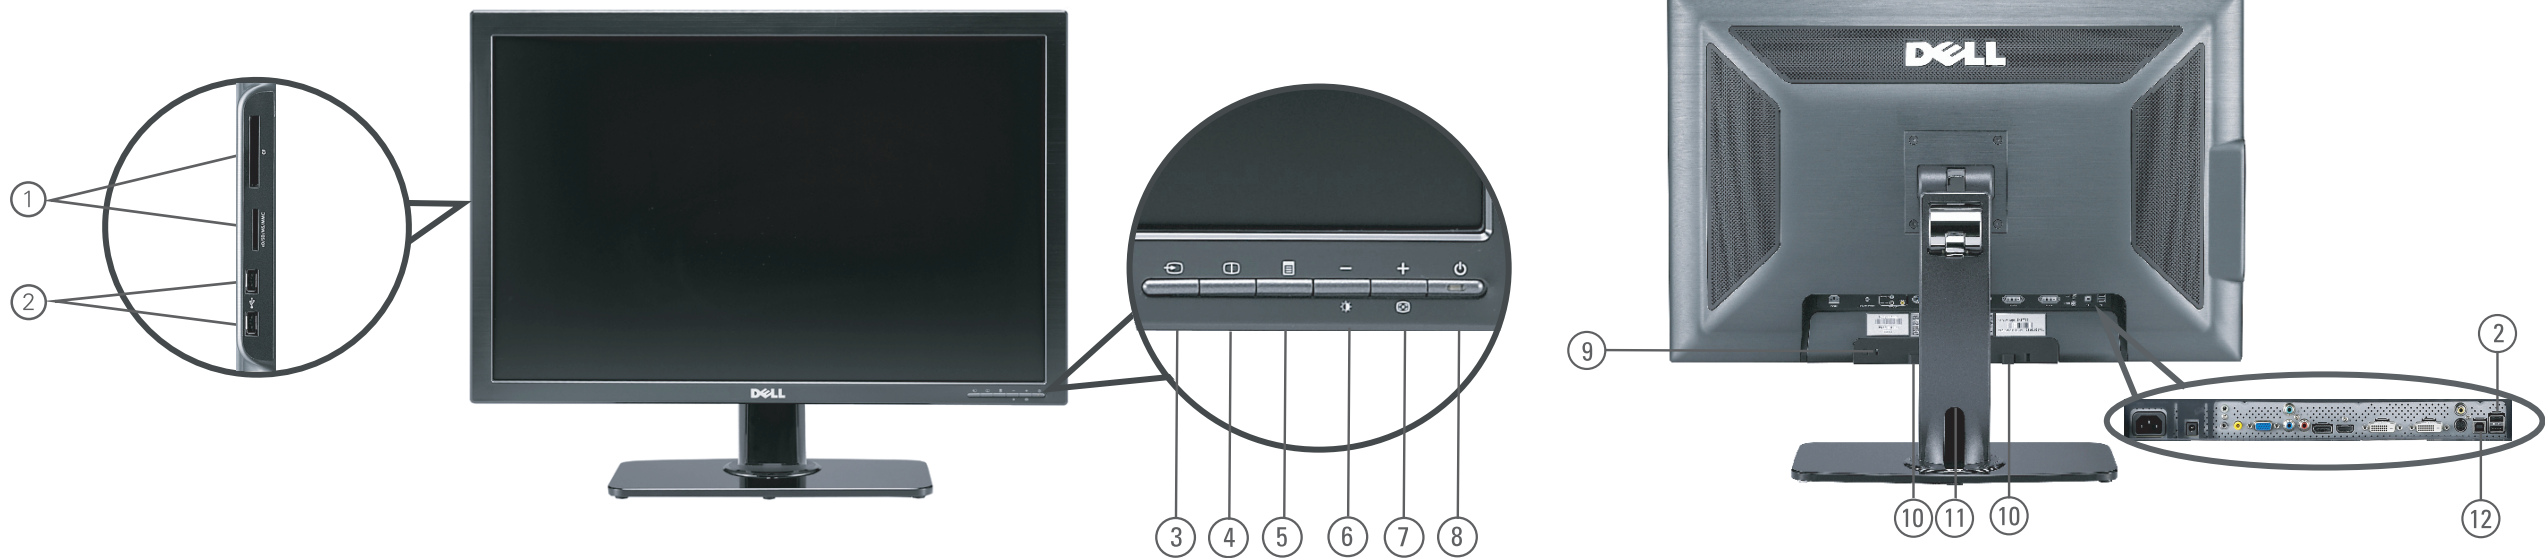

1. Card reader supports
2. USB downstream port
3. Video Input Select
4. Picture by picture
5. OSD Menu/Select
6. Brightness & Contrast/Down (-) button
7. Auto-Adjust/Up (+) button
8. Power button (with power light indicator)
9. Security lock slot
10. Dell Soundbar mounting brackets
11. Cable holder
12. USB upstream port

1. Support lecteur de cartes
2. Ports en aval USB
3. Sélectionner l'Entrée vidéo
4. Imagen por imagen
5. Menu OSD/Sélectionner
6. Bouton Luminosité & Contraste/Bas (-)
7. Bouton Réglage Auto/Haut (+)
8. Bouton Alimentation (avec témoin lumineux d'alimentation)
9. Orifice de verrouillage de sécurité
10. Support de montage de la Soundbar Dell
11. Support de câbles
12. Port en amont USB

1. Admite lector de tarjetas
2. Puertos USB para descarga de datos
3. Seleccionar entrada de vídeo
4. Imagen por imagen
5. Menú OSD/Seleccionar
6. Botón de Brillo y Contraste/Abajo (-)
7. Botón de Ajuste automático/Arriba (+)
8. Botón de encendido (con indicador luminoso de encendido)
9. Ranura de bloqueo de seguridad
10. Soportes de montaje para la barra de sonidos Dell
11. Abrazadera de cables
12. Puerto USB para carga de datos

1. Suporte para leitor de cartões de memória
2. Portas USB em downstream
3. Seleccionar entrada de vídeo
4. Picture by picture (Imagem a imagem)
5. Menu OSD/Seleccionar
6. Botão Brilho e Contraste/Para baixo (-)
7. Botão Ajuste automático/Para cima (+)
8. Botão de alimentação (com LED indicador de alimentação)
9. Ranhura para travamento de segurança
10. Suportes de montagem para o Dell Soundbar
11. Suporte do cabo
12. Porta USB em upstream

1. Kartenleser wird unterstützt
2. USB Downstream-Anschlüsse
3. Videoeingang-Auswahl/Unten
4. Bild neben bild
5. OSD Menü/Auswahl
6. Helligkeit & Kontrast-/Ab(-)-Taste
7. Auto-Einstellen-/Auf (+)-Taste
8. Netzschalter (mit Betriebsanzeige)
9. Diebstahlsicherung
10. Dell Soundbar-Montagehalter
11. Kabelhalter
12. USB Upstream-Anschluss

1. Supporta il lettore di schede
2. Porte downstream USB
3. Selezione ingresso video
4. Picture by picture (Immagine per immagine)
5. Menu OSD/Selezione
6. Tasto Luminosità e Contrasto/Giù (-)
7. Tasto Regolazione automatica/Su (+)
8. Tasto di accensione (con indicatore luminoso)
9. Slot per blocco di sicurezza
10. Staffe di montaggio Dell Soundbar
11. Alloggio cavo
12. Porta upstream USB

1. Obsługa czytnika kart
2. Portas USB downstream
3. Wybór wejścia video
4. Obraz po obraz
5. Menu OSD/Wybór
6. Przycisk Jasność i kontrast/w dół (-)
7. Przycisk automatycznej regulacji/w górę (+)
8. Przycisk zasilania (ze wskaźnikiem zasilania)
9. Gniazdo blokady zabezpieczenia
10. Wsporniki montażowe Dell Soundbar
11. Uchwyt kabla
12. Porta USB de upstream



Finding Information

See the monitor's *User's Guide* on the *Drivers and User Documentation* media, for more information.

Trouver les Informations

Pour plus d'informations, consultez le *guide d'utilisation* dans la partie concernant les supports de pilotes et documentation utilisateur.

Búsqueda de información

Para obtener más información, consulte la *Guía del usuario* que encontrará en el disco *Controladores y documentación del usuario*.

Procurar informação

Para mais informações, consulte o *Manual do usuário* na mídia *Drivers e documentação do usuário*.

Finden von Informationen

Weitere Informationen finden Sie unter *Treiber und Anwenderdokumentation* in der *Bedienungsanleitung*.

Dove reperire informazioni

Fare riferimento alla *Guida all'uso*, del supporto *Drivers and User Documentation (Driver e Documentazione)*, per altre informazioni.

Znajdowanie informacji

Dalsze informacje zawiera *Podręcznik użytkownika* monitora znajdujący się na nośniku *Drivers and User Documentation (Sterowniki i dokumentacja)*.

Information in this document is subject to change without notice.
© 2009 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Dell and the DELL logo are trademarks of Dell Inc. Dell disclaims proprietary interest in the marks and names of others.

December 2009

Les informations continues dans ce document peuvent être soumises à des modifications sans préavis.
© 2009 Dell Inc. Tous droits réservés.

Toute reproduction, par quelque manière que ce soit, est strictement interdite sans l'autorisation écrite de Dell Inc.

Dell et le logo DELL sont la propriété de Dell Inc. Tous les autres noms commerciaux ou noms de marques sont la propriété de leurs détenteurs respectifs.

Décembre 2009

La información contenida en este documento está sujeta a cambios sin previo aviso.
© 2009 Dell Inc. Reservados todos los derechos.

Se prohíbe estrictamente la reproducción de este documento en cualquier forma sin permiso por escrito de Dell Inc.

Dell y el logotipo DELL son marcas registradas de Dell Inc. Dell renuncia al derecho de posesión sobre las marcas y nombres de terceros.

Diciembre 2009

As informações contidas neste documento estão sujeitas a alterações sem aviso prévio.
© 2009 Dell Inc, Corporation. Todos os direitos reservados.

A reprodução de qualquer forma sem permissão por escrito da Dell Inc. é estritamente proibida.

Dell e o logotipo DELL são marcas comerciais da Dell Inc. A Dell exclui quaisquer interesses de propriedade nas marcas e nomes de outros.

Decembro 2009

Die Informationen in diesem Dokument unterliegen unangekündigten Änderungen.
© 2009 Dell Inc. Alle Rechte vorbehalten.

Die Vervielfältigung dieses Dokuments in jeglicher Form ist ohne schriftliche Genehmigung der Dell Inc. streng untersagt.

Dell und das DELL-Logo sind Warenzeichen der Dell Inc. Dell erhebt keinerlei Eigentumsansprüche auf Warenzeichen und Namen Dritter.

Dezember 2009

Le informazioni contenute in questo documento sono soggette a variazioni senza preavviso.
© 2009 Dell Inc. Tutti i diritti riservati.

È severamente proibita la riproduzione di qualsiasi elemento senza il permesso scritto di Dell Inc.

Dell e il logo DELL sono marchi registrati di Dell Inc. Dell non riconosce interesse di proprietà esclusiva nei marchi e nelle denominazioni di altri.

Dicembre 2009

Informacja zawarta w niniejszym dokumencie może ulec zmianie bez uprzedzenia.
© 2009 Dell Inc. Wszystkie prawa zastrzeżone.

Powielanie niniejszego dokumentu przy użyciu jakiegokolwiek techniki bez pisemnej zgody Dell Inc. jest surowo zabronione.

Dell logo DELL to znaki towarowe firmy Dell Inc. Firma Dell nie zgłasza żadnych praw do marek i nazw innych firm.

Grudzień 2009



Printed in China

Dell™ 3008WFP Flat Panel Monitor User's Guide

About Your Monitor

[Product Features](#)
[Identifying Parts and Controls](#)
[Monitor Specifications](#)
[Universal Serial Bus \(USB\) Interface](#)
[Plug and Play Capability](#)
[Card Reader Specifications](#)
[Maintenance Guidelines](#)

Setting Up the Monitor

[Connecting the Monitor](#)
[Organizing the Cables](#)
[Attaching the Soundbar \(Optional\)](#)
[Removing the Stand](#)
[Attaching the Stand](#)

Operating the Monitor

[Using the Front Panel Controls](#)
[Using the On-Screen Display \(OSD\)](#)
[Setting the Optimal Resolution](#)
[Using the Dell Soundbar \(Optional\)](#)
[Using the Tilt, Swivel, and Vertical Extension](#)

Solving Problems

[Monitor Specific Troubleshooting](#)
[Common Problems](#)
[Video Problems](#)
[Product Specific Problems](#)
[Universal Serial Bus \(USB\) Specific Problems](#)
[Troubleshooting the Dell™ Soundbar](#)
[Troubleshooting the Card Reader](#)

Appendix

[Safety Instructions](#)
[FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
[Contacting Dell](#)

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.
© 2007-2009 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the Dell logo are trademarks of Dell Inc; *Microsoft*, *Windows*, and *Windows NT* are registered trademarks of Microsoft Corporation;

Adobe is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 3008WFPT

December 2009 Rev. A05

About Your Monitor

Dell™ 3008WFP Flat Panel Monitor User's Guide

- [Product Features](#)
- [Identifying Parts and Controls](#)
- [Monitor Specifications](#)
- [Universal Serial Bus \(USB\) Interface](#)
- [Plug and Play Capability](#)
- [Card Reader Specifications](#)
- [Maintenance Guidelines](#)

Product Features

The **3008WFP** flat panel display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD). The monitor features include:


- 30-inch (756.228 mm) viewable area display.
- 2560 x 1600 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or moving side-to-side.
- Tilt, swivel and vertical extension capabilities.
- Removable pedestal and VESA 100 mm mounting holes for flexible mounting solutions.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation CD includes an information file (INF), Image color Matching File (ICM), and product documentation.
- Security lock slot.
- 9-in-2 USB 2.0 Card Reader (CF I/II, xD, SD/Mini SD, MS/HSMD/MSPRO, MMC).
- Support VGA, DVI-D, DisplayPort, HDMI, Component, S-Video and Composite video signals.
- Support Picture by Picture (PBP) Select mode.

Identifying Parts and Features

Front View



Front View

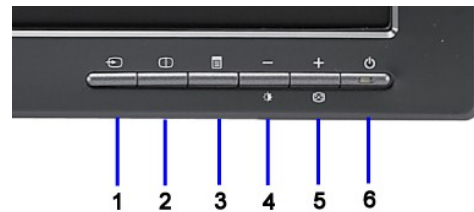


Front panel controls

Label	Description
1	Video input select
2	Picture by Picture (PBP) Select

- 3 OSD Menu/Select
 - 4 Brightness & Contrast/Down (-)
 - 5 Auto-adjust/Up (+)
 - 6 Power button (with power light indicator)
-

Back View

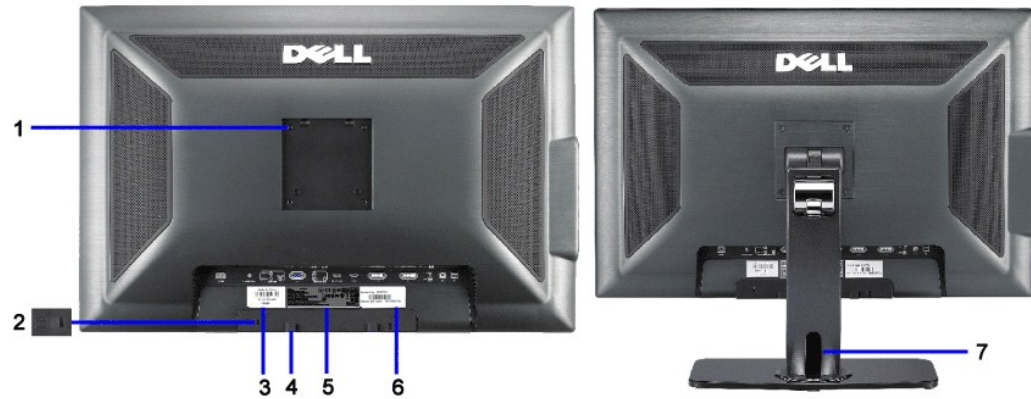


Back view

Back View with monitor stand

Label	Description	Use
1	VESA mounting holes (100mm) (Behind attached base plate)	To mount the monitor.
2	Security lock slot	To help secure your monitor.
3	Barcode serial number label	To contact Dell for technical support.
4	Dell Soundbar mounting brackets (2)	To attach the optional Dell Soundbar.
5	Regulatory rating label	Lists the regulatory approvals.
6	Service tag label	Refer to this label if you need to contact Dell for technical support.
7	Cable holder	Help organize cables by placing them in the holder.

Side View

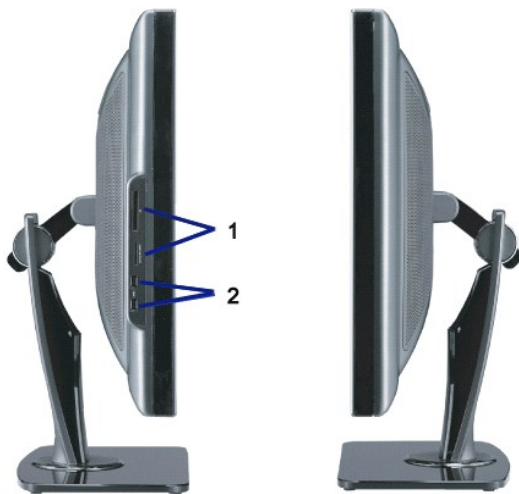

Left view


Right view

Label	Description
1	Card reader: for details, see Card Reader Specifications .
2	USB downstream ports.



NOTE: To use the USB connectors on your monitor, connect the USB cable to your computer and the USB upstream connector to your monitor.

Bottom View

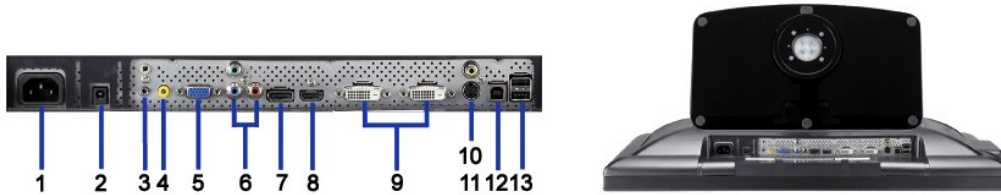

Label	Description	Use
1	AC power cord connector	Connect the power cord to wall outlet.
2	DC power connector for Dell Soundbar	Connect the power cord for the Soundbar (optional).
3	Audio connectors	Connect the HDMI 2.0 channel or 5.1 channel audio output devices. Connect the front left/right channel output to the green connector. Use this connector for 2.0/2.1 channel audio connection. Connect the rear left/right channel output to the black connector. Use this connector for 5.1 channel audio connection.
4	Audio connector	Connect the center/subwoofer channel output to the yellow connector. Use this connector for 5.1 channel audio connection.
5	VGA connector	Connect the VGA cable from your computer to the monitor.
6	Component video connectors	Connect devices such as a DVD player, set-top box, or cable TV box.
7	DisplayPort connector	Connect the DisplayPort cable from your computer to the monitor.
8	HDMI connector	Connect devices such as a DVD player or set-top box.
9	DVI connectors	Connect the DVI cable from your computer to the monitor.
10	Composite video connector	Use this to connect devices such as VCR or DVD player.
11	S-Video connector	Use this to connect devices such as a video game system, a digital camera, or a DVD player.
12	USB upstream port	Connect the USB cable that came with your monitor to the monitor and the computer. Once this cable is connected you can use the USB connectors on the side and bottom of the monitor.
13	USB downstream ports	Connect your USB devices.

Monitor Specifications

The following sections give you information about the various power management modes and pin assignments for various connectors for your monitor.

Power Management Modes

If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. *Mode**. If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the of this automatic power saving feature:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation (with Dell Soundbar and USB active)	Active	Active	Active	Blue	250 W (maximum)
Normal operation	Active	Active	Active	Blue	163 W (typical)
Active-off mode	Inactive	Inactive	Blanked	Amber	Less than 2 W
Switch off	-	-	-	Off	Less than 1 W

The OSD will only function in the *normal operation* mode. When the **menu** or **plus** buttons are pressed in Active-off mode, one of the following messages will be displayed: Analog Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse


OR
Digital Input In Power Save Mode. Press Computer Power Button or Any Key on Keyboard or Move Mouse
Activate the computer and the monitor to gain access to the OSD.

 **NOTE:** While using the DisplayPort connector at 230V/50Hz, the DisplayPort consumes approximately 0.25W more than the VGA or DVI-D while in sleep n

* Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.

Pin Assignments


VGA Connector

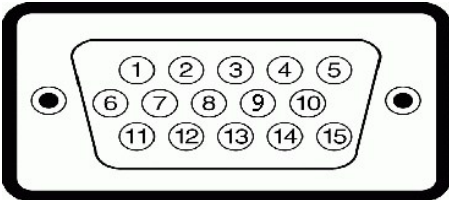

Pin Number 15-pin Side of the Connected Signal Cable

1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	+5V
10	DDC-GND
11	GND
12	DDC-SDA
13	H-sync
14	V-sync
15	DDC-SCL

DVI Connector

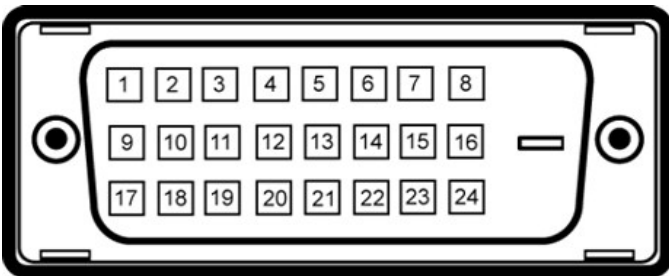


 **NOTE:** Pin 1 is at the top left.

Pin Number 24-pin Side of the Connected Signal Cable

1	T.M.D.S. Data 2-
2	T.M.D.S. Data 2+
3	T.M.D.S. Data 2/4 Shield
4	T.M.D.S. Data 4-
5	NT.M.D.S. Data 4+
6	DDC Clock
7	DDC Data
8	No Connect
9	T.M.D.S. Data 1-
10	T.M.D.S. Data 1+


11	T.M.D.S. Data 1/3 Shield
12	T.M.D.S. Data 3-
13	T.M.D.S. Data 3+
14	+5V Power
15	Self Test
16	Hot Plug Detect
17	T.M.D.S. Data 0-
18	T.M.D.S. Data 0+
19	T.M.D.S. Data 0/5 Shield
20	T.M.D.S. Data 5-
21	T.M.D.S. Data 5+
22	T.M.D.S. Clock Shield
23	T.M.D.S. Clock +
24	T.M.D.S. Clock -

20-pin DisplayPort Connector

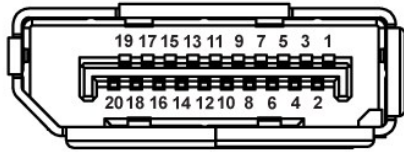

Pin Number	20-pin Side of the Connected Signal Cable
1	ML Lane 3(n)
2	GND
3	ML Lane 3(p)
4	ML Lane 2(n)
5	GND
6	ML Lane 2(p)
7	ML Lane 1(n)
8	GND
9	ML Lane 1(p)
10	ML Lane 0(n)
11	GND
12	ML Lane 0(p)
13	GND
14	GND
15	AUX CH (p)
16	GND
17	AUX CH (n)
18	Hot Plug Detect
19	Return
20	DP PWR


19-pin HDMI Connector

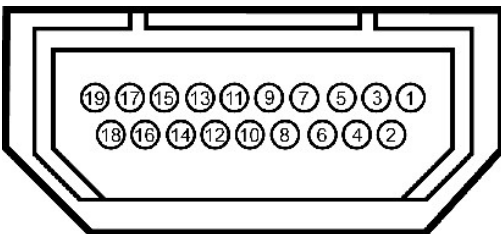

Pin Number	19-pin Side of the Connected Signal Cable
------------	---

- 1 T.M.D.S. Data 2-
 - 2 T.M.D.S. Data 2 Shield
 - 3 T.M.D.S. Data 2+
 - 4 T.M.D.S. Data 1+
 - 5 T.M.D.S. Data 1 Shield
 - 6 T.M.D.S. Data 1-
 - 7 T.M.D.S. Data 0+
 - 8 T.M.D.S. Data 0 Shield
 - 9 T.M.D.S. Data 0-
 - 10 T.M.D.S. Clock +
 - 11 T.M.D.S. Clock Shield
 - 12 T.M.D.S. Clock -
 - 13 CEC
 - 14 Reserved(N.C. on device)
 - 15 SCL
 - 16 SDA
 - 17 DDC/CEC Ground
 - 18 +5V Power
 - 19 Hot Plug Detect
-

S-video Connector

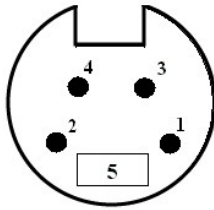

Pin Number	5-pin Side of the Connected Signal Cable (Cable not included)
1	GND
2	GND
3	LUMA
4	CHROMA
5	GND

Composite Video Connector



Luma Composite Chroma

Component Video Connector



Pin Number	3-pin Side of the Connected Signal Cable (Cable not included)
1	Y (Luminance signal)
2	Pb (Color differential signal)
3	Pr (Color differential signal)


Universal Serial Bus (USB) Interface

This section gives you information about the USB ports that are available on the left side of your monitor.

NOTE: This monitor supports High-Speed Certified USB 2.0 interface.


Transfer speed	Data Rate	Power Consumption
High speed	480 Mbps	2.5W (Max., each port)
Full speed	12 Mbps	2.5W (Max., each port)
Low speed	1.5 Mbps	2.5W (Max., each port)

USB Upstream Connector

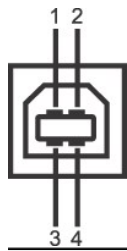

Pin Number	4-pin Side of the connector
1	DMU
2	VCC
3	DPU
4	GND

USB Downstream Connector

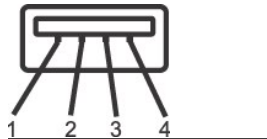

Pin Number	4-Pin Side of the Signal Cable
1	VCC
2	DMD
3	DPD
4	GND

USB Ports

- 1 upstream - rear
- 4 downstream - 2 on rear; 2 on left side

NOTE: USB 2.0 functionality requires a USB 2.0-capable computer.

NOTE: The monitor's USB interface works only when the monitor is on or in power save mode. If you turn off the monitor and then turn it on, the attached p to resume normal functionality.

Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identificat Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different s information about changing the monitor settings, see [Operating the Monitor](#).

Card Reader Specifications


Overview

- 1 The Flash Memory Card Reader is a USB storage device that allows users to read and write information from and into the memory card.
- 1 The Flash Memory Card Reader is automatically recognized by Windows® 2000, XP , Vista & Windows® 7.
- 1 Once installed and recognized, each separate memory card (slot) appears as a separate drive/drive letter.
- 1 All standard file operations (copy, delete, drag-and-drop, etc.) can be performed with this drive.

Features

The Flash Memory Card Reader has the following features:


- 1 Supports Windows 2000, XP and Vista operating systems.
- 1 No Windows 9X support from Dell.
- 1 Mass Storage Class device (No drivers are required under Windows 2000, XP , Vista & Windows 7).
- 1 USB-IF certification.
- 1 Supports various memory card media.

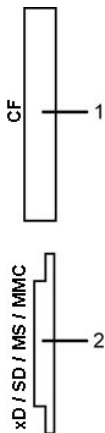



The following table lists the slot to support what kind of memory card:

Slot Number	Flash memory cards type
1	Compact Flash type I/II Card (CF I/II)/CF form factor ATA hard drives to USB 2.0 bus
2	xD memory card Memory Stick Card (MS)/High Speed Memory Stick (HSMS)/Memory Stick Pro Card (MS PRO)/Memory Stick Duo (with Adapter) Secure Digital Card (SD)/Mini Secure Digital (with Adapter)/ TransFlash Card (with Adapter) MultiMedia Card (MMC)/Reduced Size MultiMedia Card (with Adapter)

Cards Type	Support Specification	Memory Card Spec Version	Max. capacity
CF	CompactFlash Specification	2.0	128 GB
xD	xD Picture Card Specification	1.2	2 GB
MS	Memory Stick Standard Format Specification	1.40-00	128 MB
MS PRO	Memory Stick Pro Standard Format Specifications	1.01-01	32 GB
MD Duo	Memory Stick Duo Standard Format Specifications	1.10-00	128 MB/32 GB
SD	SD Memory Card Specifications	2.0	32 GB
MMC	MultiMediaCard System Specification	4.2	32 GB

 **NOTE:** MSPRO : MSPRO includes MSPRO Duo and MS Micro.

 **NOTE:** SD : SD includes MiniSD.

 **NOTE:** MMC : MMC includes RS-MMC.

Flat Panel Specifications

Screen type	Active matrix - TFT LCD
Screen dimensions	30 inches (30-inch viewable image size)
Preset display area:	
Horizontal	641.28 mm (25.25 inches)
Vertical	400.80 mm (15.78 inches)
Pixel pitch	0.2505 mm
Viewing angle	178° (vertical) typ, 178° (horizontal) typ
Luminance output	370 cd/m ² (typ)
Contrast ratio	1000 to 1 (typ)
Dynamic contrast ratio	3000 to 1 (typ)
Faceplate coating	Antiglare with hard-coating 3H
Backlight	Wide CCFL (9) backlight system
Color Gamut (Typical)	117%*
Response Time	8ms typical (Grey to Grey) and 12ms maximum (Black to White)

* 3008WFP color gamut (typical) is based on CIE1976 (117%) and CIE1931 (100.6%) test standards.

[Back to Contents Page](#)

Appendix

Dell™ 3008WFP Flat Panel Monitor User's Guide

- [Safety Instructions](#)
 - [FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
 - [Contacting Dell](#)
-



CAUTION: Safety Instructions



CAUTION: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the *Product Information Guide*.

FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit support.dell.com.
 2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
 3. Click **Contact Us** on the left side of the page.
 4. Select the appropriate service or support link based on your need.
 5. Choose the method of contacting Dell that is convenient for you.
-

[Back to Contents Page](#)


[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 3008WFP Flat Panel Monitor User's Guide

If you have a Dell™ desktop or a Dell™ portable computer with internet access

1. Download and install the latest driver for your graphics card from the Dell Support site at: support.dell.com.
2. Set the resolution to **1920 x 1200/2560 x 1600**.

 **NOTE:** If you are unable to set the resolution to 1920 x 1200/2560 x 1600, please contact Dell™ to inquire about a graphics adapter that supports these resolutions.

[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 3008WFP Flat Panel Monitor User's Guide


If you have non Dell™ desktop, portable computer, or graphic card

In Windows XP:

1. Right-click on the desktop and click **Display Properties**.
2. Select the **Settings** tab.
3. Select **Advanced**.
4. Select the **Adapter** tab. The **Adapter Type** lists the graphics adapter on your system.
5. Download and install the latest drivers from the graphics card manufacturers web site. (You can download drivers for your ATI/NVIDIA graphics card from: www.ATI.com/www.NVIDIA.com.)
6. Set the resolution to 1920x1200 for Analog input or 2560x1600 for Digital/Displayport input.

In Windows Vista® or Windows 7:

1. Right-click on the desktop and click **Personalization**.
2. Click **Change Display Settings**.
3. Click **Advanced Settings**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Refer to the graphic card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com>).
6. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920 x 1200/2560 x 1600** again.

 **NOTE:** If you are unable to set the resolution to 1920 x 1200/2560 x 1600, contact the computer manufacturer or consider purchasing a graphics adapter that will support the video resolution of 1920 x 1200/2560 x 1600.


Operating the Monitor











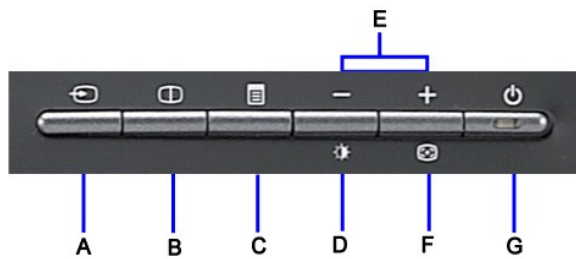




















Dell™ 3008WFP Flat Panel Monitor User's Guide












- [Using the Front Panel Controls](#)
- [Using the On-Screen Display \(OSD\) Menu](#)
- [Setting the Optimal Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)
- [Using the Tilt, Swivel, and Vertical Extension](#)

Using the Front Panel

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.




Front panel Button	Description															
<p>A</p>  <p>Input Source Select</p>	<p>Use Input Source Select button to select between eight different video signals that may be connected to your monitor.</p> <ul style="list-style-type: none"> 1 VGA input 1 DVI-D 1 input 1 DVI-D 2 input 1 DisplayPort input 1 HDMI input 1 Component video input 1 S-Video input 1 Composite video Input <p>As you cycle through the inputs you will see the following messages to indicate currently selected input source. It may take 1 or 2 seconds for the image to appear.</p> <table border="0" style="width: 100%; text-align: center;"> <tr> <td style="width: 50%;"></td> <td style="width: 10%; font-size: small;">or</td> <td style="width: 50%;"></td> </tr> <tr> <td></td> <td>or</td> <td></td> </tr> <tr> <td></td> <td>or</td> <td></td> </tr> <tr> <td></td> <td>or</td> <td></td> </tr> </table> <p>If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.</p> <table border="0" style="width: 100%; text-align: center;"> <tr> <td style="width: 50%;"></td> <td style="width: 10%; font-size: small;">or</td> <td style="width: 50%;"></td> </tr> </table> <p>If either S-Video or Composite input is selected and both cables are not connected or the video source is turned off, the screen does not display an image. If any button is pressed (except power button), the monitor displays the following message:</p>		or			or			or			or			or	
	or															
	or															
	or															
	or															
	or															

	 HDMI : NO INPUT or  S-VIDEO : NO INPUT  COMPOSITE : NO INPUT or  COMPONENT : NO INPUT
B	 Picture by Picture (PBP) Select Use this button to activate Picture by Picture (PBP) mode adjustment.
C	 OSD Menu/Select Use the MENU button to launch the on-screen display (OSD) and select the OSD Menu. See Accessing the Menu System .
D	 Brightness/Contrast Hot Key Use this button for direct access to the "Brightness" and "Contrast" control menu.
E	 Down (-) and Up (+) Use these buttons to navigate and adjust the slider-bar (decrease/increase ranges) controls in the OSD.
F	 Auto Adjust Use this button to activate automatic setup and adjust menu. The following dialog appears on a black screen as the monitor self-adjusts to the current input:  Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under DISPLAY SETTINGS. NOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables.
G	 Power button (with power light indicator) Use the Power button to turn the monitor on and off. The blue LED indicates the monitor is on and fully functional. An amber LED indicates DPMS power save mode.

Using the On-Screen Display (OSD) Menu

Accessing the Menu System

 **NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.

1. Push the MENU button to launch the OSD menu and display the main menu.


Main Menu for Analog (VGA) Input






















or

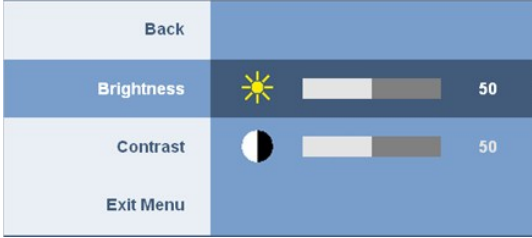Main Menu for non Analog (non VGA) Input


















 **NOTE:** AUTO ADJUST is only available when you are using the analog (VGA) connector.

2. Push the  and  buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the following table for a complete list of all the options available for the monitor.
3. Push the MENU button once to activate the highlighted option.
4. Push the  and  buttons to select the desired parameter.
5. Push  to enter the slide bar and then use the  or  button, according to the indicators on the menu, to make your changes.
6. Select the "back" option to return to the main menu or "exit" to exit the OSD menu.

Icon	Menu and Submenus	Description
	EXIT	Select to exit the main menu.
	BRIGHTNESS & CONTRAST Back Brightness Contrast Exit Menu	Use this menu to activate Brightness/Contrast adjustment.  Push  to go back to the main menu. Brightness adjusts the luminance of the backlight. Push the  button to increase brightness and push the  button to decrease brightness (min 0 ~ max 100). Contrast Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary. Push the  button to increase contrast and push the  button to decrease contrast (min 0 ~ max 100). The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen. Exit Menu Push  to exit the OSD main menu.
	AUTO ADJUST	Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display settings for use with your particular setup.  NOTE: In most cases, Auto Adjust produces the best image for your configuration. NOTE: AUTO ADJUST option is only available when you are using the analog (VGA) connector.
	INPUT SOURCE	Use the INPUT SOURCE menu to select between different video signals that may be connected to your monitor.

Back	
Auto Select	Scan for Input Sources
VGA	
DVI-D1	
DVI-D2	
DisplayPort	
HDMI	
Component	
S-Video	
Composite	
Exit Menu	


	Back	Push  to go back to the main menu.
	Auto Select	Push  to scan for available input signals.
	VGA	Select VGA input when you are using the analog (VGA) connector. Push  to select the VGA input source.
	DVI-D1/ DVI-D2	Select DVI-D input when you are using the Digital (DVI) connector. Push  to select the DVI input source.
	DisplayPort	Select DisplayPort input when you are using DisplayPort connector. Push  to select the DisplayPort input source.
	HDMI	Select HDMI input when you are using HDMI connector. Push  to select the HDMI input source.
	Component	Select Component input when you are using component video connector. Push  to select the component input source.
	S-Video	Select S-Video input when you are using S-Video connector. Push  to select the S-Video input source.
	Composite	Select Composite input when you are using composite video connector. Push  to select the composite input source.
	Exit Menu	Push  to exit the OSD main menu.
	PRESET MODES	Use the Preset Modes to adjust the color setting mode and color temperature. There are different color setting sub-menus for VGA/DVI-D and Video input.

Color setting submenu for VGA/DVI-D input

Color setting submenu for Video Input



VGA/DVI-D input

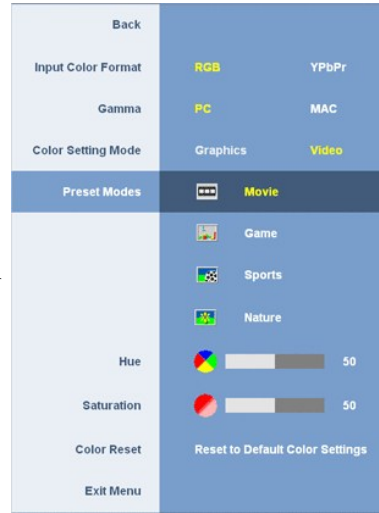

Video input

Back

Push to go back to the main menu.

Input Color Format

Choose the RGB option if monitor is connected to a PC or a DVD using a VGA or a DVI cable. Choose the YPbPr option if monitor is connected to a DVD by a YPbPr cable.

Gamma

To achieve the different color mode for PC and Mac.

Color Setting mode

You can choose between a Graphics and a Video mode. If your computer is connected to your monitor, choose Graphics. If a DVD, STB, or VCR is connected to your monitor, choose Video.

Preset Modes (VGA/DVI-D input)

You can choose different color presets for different viewing modes.



Desktop

Mode suitable for desktop applications.



Multimedia

Mode for multimedia applications (example, video playback).



Game

Mode suitable for game applications.



Adobe RGB

This mode is compatible with Adobe RGB (1998).



sRGB

Mode to emulate 72% NTSC color.



Warm

Warm mode is selected to obtain a redder tint. This color setting is typically used for color-intensive applications (photograph image editing, multimedia, movies, etc.).



Cool

Cool mode is selected to obtain a bluish tint. This color setting is typically used for text based applications (spreadsheets, programming, text editors, etc.).



Custom (R,G,B)

Use the or button to increase or decrease each of the three colors (R, G, B) independently, in single-digit increments, from 0 to 100.

Preset Modes (Video input)

You can choose different color presets for different viewing modes.



Movie

Mode suitable for movie playback.



Game

Mode suitable for game applications.














Sports


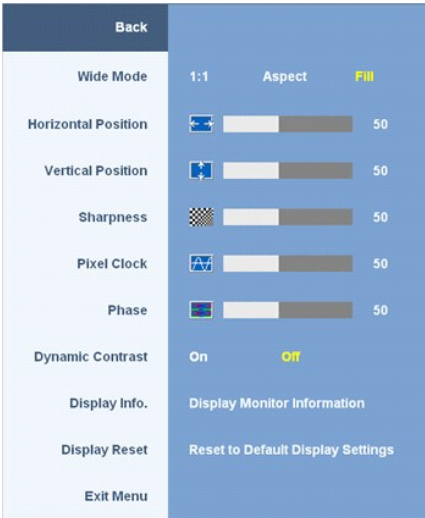
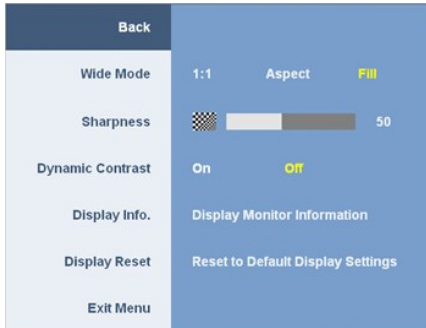
















Mode suitable for sports scenes.



Nature

Mode suitable for nature scenes.













	Hue	This feature can make color shift of video image to green or purple. This is used to adjust for desired flesh tone color. Use  and  buttons to adjust the hue from '0' to '100'.  makes video image shade into greenish  makes video image shade into purplish NOTE: Hue adjustment only available for video input.
	Saturation	This feature can adjust the color saturation of the video image. Use  and  buttons to adjust the saturation from '0' to '100'.  makes video image looks more monochrome  makes video image looks more colorful NOTE: Saturation adjustment only available for video input.
	Color Reset	Reset your monitor color settings to the factory settings.
	Exit Menu	Push  to exit the OSD main menu.

	DISPLAY SETTINGS	
	<p>Display setting mode submenu for VGA/DVI-D input</p>  <p>Display setting mode Video input</p> 	
		or
	VGA/DVI-D input	Video input
	NOTE: Display Settings modes are different between the VGA/DVI-D and Video inputs.	
	Back	Push  to go back to the main menu.
	Wide Mode	Adjust the image ratio as 1:1, aspect or full screen.
	Horizontal Position	Use the  and  buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+). NOTE: When using DVI source, the Horizontal Position setting is not available.
	Vertical Position	Use the  and  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+). NOTE: When using DVI source, the Vertical Position setting is not available.
	Sharpness	This feature can make the image look sharper or softer. Use  and  buttons to adjust the sharpness from '0' to '100'.
	Pixel Clock	The Pixel Clock and Phase adjustments allow you to adjust your monitor to your preference. These settings are accessed through the main OSD menu, by selecting 'Display Settings'. Use the  and  buttons to adjust for best image quality.
	Phase	If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again. NOTE: Pixel Clock and Phase Adjustments are only available for "VGA" input.
	Dynamic Contrast	The Dynamic Contrast adjustment helps get a higher contrast if you choose Game preset, Movie Preset, Sports Preset and Nature Preset. (Brightness control is disabled while in Dynamic Contrast mode and will be grayed out.) Use the  button to enable the Dynamic Contrast adjustment. Use the  button to disable the Dynamic Contrast adjustment.
	Display Info	All the settings related to this monitor.


Display Reset	Reset the image to the original factory setting.
Exit Menu	Push  to exit the OSD main menu.

OTHER SETTINGS



Back	Push  to go back to the main menu.
Language	Language option to set the OSD display to one of five languages (English, Espanol, Francais, Deutsch, or Japanese).
 Menu Transparency	This function is used to adjust the OSD background from opaque to transparent.
 Menu Timer	OSD Hold Time: Sets the length of time the OSD will remain active after the last time you pressed a button. Use the  and  buttons to adjust the slider in 1 second increments, from 5 to 60 seconds.
Menu Lock	Controls user access to adjustments. When 'Lock'  is selected, no user adjustments are allowed. All buttons are locked except  button. NOTE: When the OSD is locked, pressing the menu button will take the user directly to the OSD settings menu, with 'OSD Lock' pre-selected on entry. Press and hold  button for 15 seconds to unlock and allow user access to all applicable settings.
Audio Options	To turn on or off audio power during power save mode. Default is "Enable". Select Disable to disable this feature. Yes — Turn off audio power during power save mode. No — Turn on audio power during power save mode.
Audio Configuration	Audio offers two kind of configurations of audio channels. Use the  or  button to move between 2 channels and 5.1 channels and select the desired option.
DDC/CI	DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance etc) to be adjustable via software on your PC. You can disable this feature by selecting "Disable". Default is "Enable". Select Disable to disable this feature. Enable this feature for best user experience and optimum performance of your monitor. Below warning message appears when you select "Enable DDC/CI": 
LCD Conditioning	If an image appears to be stuck on the monitor, select LCD Conditioning to help eliminate any image retention. Using the LCD Conditioning feature may take several hours. Severe cases of image retention are known as burn-in, the LCD Conditioning feature does not remove burn-in. Below warning message appears when you select "Enable LCD Conditioning":  NOTE: Use LCD Conditioning only when you experience a problem with image retention.
Factory	Reset all OSD settings to the factory preset values.

Reset
Exit Menu


Push  to exit the OSD main menu.



**PBP
SETTINGS**

This function brings up a window displaying image from another input source. Thus you can watch 2 images from different sources at the same time.


Picture by Picture (PBP) submenu when Picture by Picture (PBP) OFF

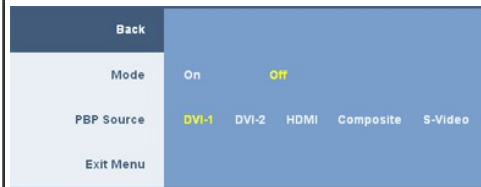

INPUT SOURCE submenu when Picture by Picture (PBP) ON (Main source is VGA or DisplayPort or Component input.)



Picture by Picture (PBP) submenu when Picture by Picture (PBP) ON (Second source is DVI or HDMI or Composite or S-Video).

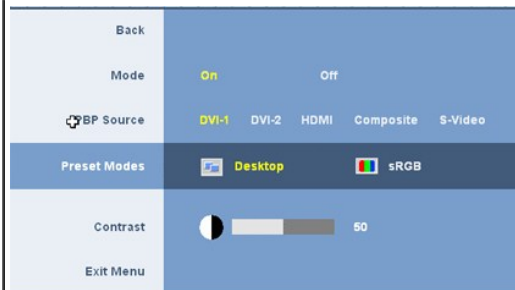



NOTE: When using DVI source, the contrast adjustment is not available.

Back Push to go back to the main menu.

Mode Use and buttons to browse and to select Picture by Picture (PBP) "On" or "Off".

PBP Source Select an input signal for Picture by Picture (PBP). (DVI-1/DVI-2/HDMI/Composite/S-Video).
Use and buttons to browse and to select.

Preset Modes You can choose different color presets for different viewing modes.
Desktop mode is for desktop applications. (DVI input source only.)
sRGB mode emulate 72% NTSC color. (DVI input source only.)
Movie mode is suitable for movie playback. (Video input sources only. HDMI/Composite /S-Video)
Nature mode is suitable for nature scenes. (Video input sources only. HDMI/Composite/S-Video)
Use and buttons to browse and to select



Contrast Adjust the contrast level of the picture in Picture by Picture (PBP) Mode.

button reduce the contrast.
 button increases the contrast.

NOTE: Contrast adjustment only available for video input.



Hue This function shifts the color of Picture by Picture (PBP) image to green or purple. This is used to adjust for desired flesh tone color.

Use and buttons to adjust the hue from '0' to '100'.

makes video image shade into greenish.

makes video image shade into purplish.

NOTE: Hue adjustment only available for video input.



Saturation Adjust the color saturation of Picture by Picture (PBP) image.

Use and buttons to adjust the saturation from '0' to '100'.

button makes the image look more monochrome.

button makes the image look more colorful.

NOTE: Saturation adjustment only available for video input.

Exit Menu Push to exit the OSD main menu.

OSD Warning Messages

When the monitor does not support a particular resolution mode you will see the following message :




or



This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the **Horizontal and Vertical frequency ranges addressable by this monitor**.
For analog input, it is recommended to use the resolution 1920 x 1200.
For digital input, it is recommended to use the resolution 2560 x 1600.

If you press any button other than the power button one of the following messages will appear depending on the selected input:

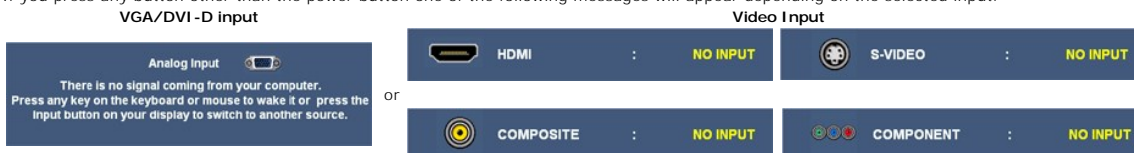

In Picture by Picture (PBP) mode, when the monitor does not sense the selected signal input, one of the following messages will appear depending upon the selected input as long as the OSD screen is closed.

1. VGA



2. DVI-D 1 / DVI-D 2



3. DisplayPort



4. HDMI



5. S-Video




6. Composite



7. Component



If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below appears.



NOTE: When the cable is connected back to the input of the monitor, any active Picture by Picture (PBP) window will disappear. Enter Picture by Picture (PBP) submenu to bring back the Picture by Picture (PBP) window.

NOTE: The Picture by Picture (PBP) function can bring up a picture from a second image source. Thus you can watch images from 1 PC source (D-Sub or DVI) Source (Composite or S-video or Component). The functions will not allow for 2 Video sources to perform Picture by Picture (PBP).

See [Solving Problems](#) for more information.

Setting the Optimal Resolution

NOTE: The optimal resolution is 1920 x 1200 for Analog input and 2560 x 1600 for Digital input.

To set the optimal resolution for the monitor:

Windows XP:

1. Right-click on the desktop and select **Properties**.
2. Select the **Settings** tab.
3. Set the screen resolution to 1920 x 1200/2560 x 1600.
4. Click **OK**.

Windows Vista or Windows 7:


1. Right-click on the desktop and select **Personalization**.
2. Click **Change Display Settings**.
3. Move the slider-bar to the right by pressing and holding left-mouse button and adjust the screen resolution to 1920 x 1200/2560 x 1600.
4. Click **OK**.

If you do not see 1920 x 1200/2560 x 1600 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

1. If you have a Dell desktop or portable computer:
 - o Go to [support.dell.com](#), enter your service tag, and download the latest driver for your graphics card.
1. If you are using a non-Dell computer (portable or desktop):
 - o Go to the support site for your computer and download the latest graphic drivers.
 - o Go to your graphics card website and download the latest graphic drivers.

Using the Dell Soundbar (Optional)

The Dell Soundbar is a stereo two channel system adaptable to mount on Dell Flat Panel Displays. The Soundbar has a rotary volume and on/off control to adjust the overall system level, a blue LED for power indication, and two audio headset jacks.

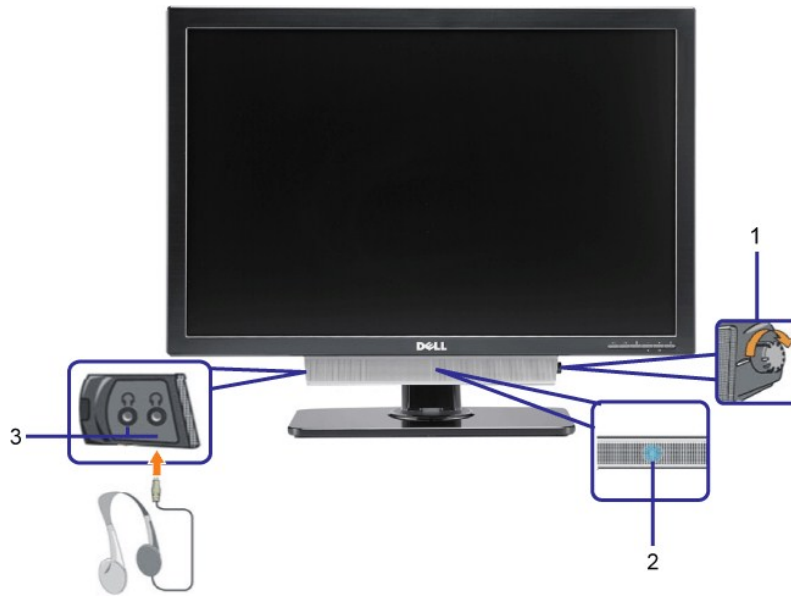


1. Power/volume control
2. Power indicator
3. Headphone connectors

Using the Tilt, Swivel, and Vertical Extension

Tilt/Swivel

With the built-in stand, you can tilt and/or swivel the monitor for the most comfortable viewing angle.

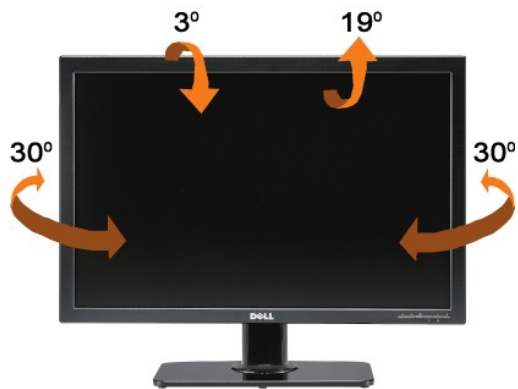

NOTE: The stand is attached and extended when the monitor is shipped from the factory.

Vertical Extension

The stand extends vertically up to 90mm. The figure below illustrates how to extend the stand vertically.



[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 3008WFP Flat Panel Monitor User's Guide

Important instructions to set the display resolution to 1920 x 1200 (VGA input source)/2560 x 1600(DVI/Displayport input sources) (Optimal)

For optimal display performance while using the Microsoft Windows® operating systems, set the display resolution to **1920 x 1200/2560 x 1600** pixels by performing the following steps:

In Windows XP:

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Move the slider-bar to the right by pressing and holding left-mouse button and adjust the screen resolution to **1920 x 1200/2560 x 1600**.
4. Click **OK**.

In Windows Vista® or Windows 7:

1. Right-click on the desktop and click **Personalization**.
2. Click **Change Display Settings**.
3. Move the slider-bar to the right by pressing and holding the left-mouse button and adjust the screen resolution to **1920 x 1200/2560 x 1600**.
4. Click **OK**.

If you do not see **1920 x 1200/2560 x 1600** as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided directions:

1: [If you have a Dell™ desktop or a Dell™ portable computer with internet access.](#)

2: [If you have non Dell™ desktop, portable computer, or graphic card.](#)

Dell™ 3008WFP Flat Panel Monitor

- [User Guide](#)

- [Important instructions to set the display resolution to 1920 x 1200 \(VGA input source\)/2560 x 1600 \(DVI/Displayport input sources\) \(Optimal\)](#)

Information in this document is subject to change without notice.
© 2007-2009 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the Dell logo are trademarks of Dell Inc; *Microsoft*, *Windows*, and *Windows NT* are registered trademarks of Microsoft Corporation;

Adobe is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 3008WFPT

December 2009 Rev. A05

Setting Up the Monitor

Dell™ 3008WFP Flat Panel Monitor User's Guide

- [Connecting the Monitor](#)
- [Organizing Your Cables](#)
- [Attaching the Soundbar \(optional\)](#)
- [Removing the Stand](#)
- [Attaching the Stand](#)


Connecting Your Monitor

⚠ CAUTION: Before you begin any of the procedures in this section, follow the [Safety Instructions](#).


To connect your monitor to the computer perform the following steps/instructions:

- 1 Turn off your computer and disconnect the power cable.
- 1 Connect either the white (digital DVI-D) or the blue (analog VGA) display connector cable to the corresponding video port on the back of your computer. Do not use both cables on the same computer. Use both the cables only when they are connected to two different computers with appropriate video systems.


Connecting the white DVI cable

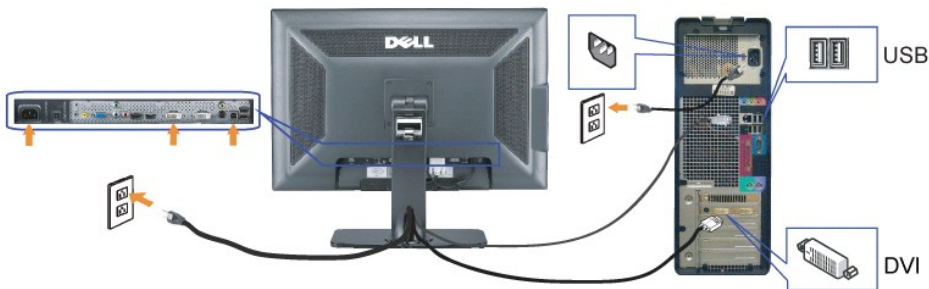


Connecting the blue VGA cable

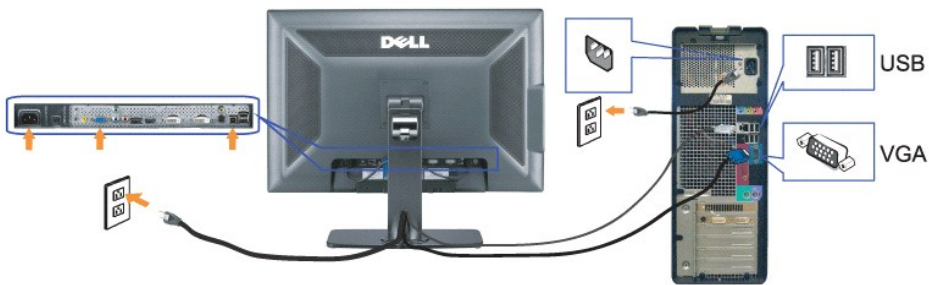

Connecting the Displayport cable

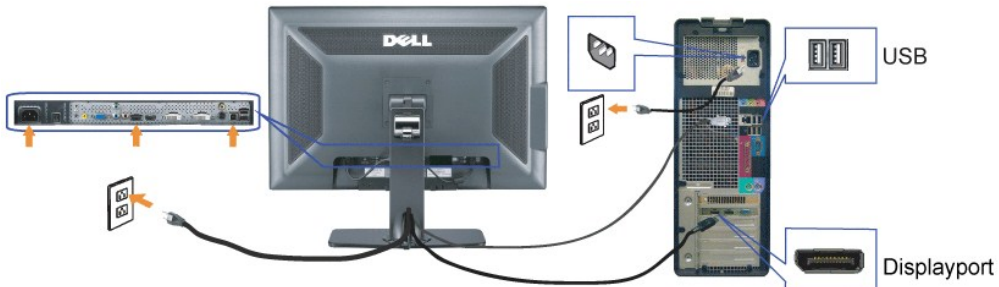

 **NOTE:** The Graphics are used for the purpose of illustration only. Appearance of the computer may vary.

After you have completed connecting the DVI/VGA/DisplayPort cable, follow the procedure below to connect the USB cable to the computer and complete your monitor setup:

1. Connect the upstream USB port (cable supplied) to an appropriate USB port on your computer.
1. Connect USB peripherals to the downstream USB ports (rear or side) on the monitor. (See [rear](#) or [side](#) view for details.)
1. **Plug the power cables for your computer and monitor into a nearby outlet.**
1. Turn on the monitor and the computer.
1. If your monitor displays an image, installation is complete. If it does not display an image, see [Solving Problems](#).
1. Use the cable holder on the monitor stand to organize the cables.


Organizing Your Cables



After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable holder to organize all cables as shown above.

Attaching the Soundbar




 **NOTE:** Do not use with any device other than Dell Soundbar.

 **NOTE:** Soundbar Power Connector - 12V DC output is for optional Dell Soundbar only.

1. Working from the rear of the monitor, attach Soundbar by aligning the two slots with the two tabs along the bottom rear of the monitor.
2. Slide the Soundbar to the left until it snaps into place.
3. Connect the Soundbar with the DC power connector.
4. Insert the mini stereo plug from the rear of the Dell Soundbar into the computer's audio output jack.

 **NOTE:** To playback audio from HDMI sources, insert the mini stereo plug into the audio OUT connector at the back of the monitor.

Removing the Stand

 **NOTE:** To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a clean surface.

Complete the following steps to remove the stand:



1. Remove the four screws from the stand.
 2. Remove the stand by lifting it straight up and away from the monitor.
-

Attaching the Stand



Place the stand on a flat surface and follow these steps to attach the monitor stand:

1. Fit the groove on the back of the monitor to the two tabs on the upper part of the stand.

2. Lower the monitor so that the monitor mounting area snaps on to or locks on to the stand and tighten up the bolts as indicated.

[Back to Contents Page](#)

Solving Problems

Dell™ 3008WFP Flat Panel Monitor User's Guide

- [Monitor Specific Troubleshooting](#)
- [Common Problems](#)
- [Video Problems](#)
- [Product Specific Problems](#)
- [Universal Serial Bus Specific Problems](#)
- [Troubleshooting the Dell™ Soundbar](#)
- [Troubleshooting the Card Reader](#)

CAUTION: Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

Monitor Specific Troubleshooting

Self-Test Feature Check

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains blue. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.



4. This box also appears during normal system operation if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

NOTE: Self test feature check is not available for S-Video, Composite, and Component video modes.

Common Problems


The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions
No Video/ Power LED off	No picture	<ul style="list-style-type: none"> 1 Ensure that the video cable connecting the monitor and the computer is properly connected and secure. 1 Verify that the power outlet is functioning properly using any other electrical equipment. 1 Ensure that the power button depressed fully.
No Video/ Power LED on	No picture or no brightness	<ul style="list-style-type: none"> 1 Increase brightness & contrast controls via OSD. 1 Perform monitor self-test feature check. 1 Check for bent or broken pins in the video cable connector. 1 Ensure that the correct input source is selected via the Input Source Select button. 1 Run the built-in diagnostics.
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> 1 Perform Auto Adjust via OSD. 1 Adjust the Phase and Pixel Clock controls via OSD. 1 Eliminate video extension cables. 1 Reset the monitor to Factory Settings. 1 Change the video resolution to the correct aspect ration (16:10).
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> 1 Perform Auto Adjust via OSD. 1 Adjust the Phase and Pixel Clock controls via OSD. 1 Reset the monitor to Factory Settings. 1 Check environmental factors. 1 Relocate the monitor and test in another room.
Missing Pixels	LCD screen has	<ul style="list-style-type: none"> 1 Cycle power on-off.

	spots	<ul style="list-style-type: none"> 1 Pixel that is permanently off is a natural defect that can occur in LCD technology.
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> 1 Cycle power on-off. 1 Pixel that is permanently off is a natural defect that can occur in LCD technology.
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Auto Adjust via OSD. 1 Adjust brightness & contrast controls via OSD.
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Auto Adjust via OSD. 1 Adjust brightness & contrast controls via OSD. <p>NOTE: When using 'DVI-D', the positioning adjustments are not available.</p>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Perform Auto Adjust via OSD. 1 Adjust Phase and Pixel Clock controls via OSD. 1 Perform monitor self-test feature check and determine if these lines are also in self-test mode. 1 Check for bent or broken pins in the video cable connector. <p>NOTE: When using 'DVI-D', the Pixel Clock and Phase adjustments are not available.</p>
Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Perform Auto Adjust via OSD. 1 Adjust Phase and Pixel Clock controls via OSD. 1 Perform monitor self-test feature check to determine if scrambled screen appears in self-test mode. 1 Check for bent or broken pins in the video cable connector. 1 Restart the computer in the <i>safe mode</i>.
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> 1 Do not perform any troubleshooting steps. 1 Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> 1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. 1 Reset the monitor to Factory Settings. 1 Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	Picture missing color	<ul style="list-style-type: none"> 1 Perform monitor self-test feature check. 1 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. 1 Check for bent or broken pins in the video cable connector..
Wrong Color	Image is displayed with the wrong colors.	<ul style="list-style-type: none"> 1 Change the Color Setting Mode to Graphics or Video using the OSD. 1 Try different Color Preset Settings in Color Settings OSD. 1 Adjust R/G/B value in Color Settings OSD if the Color Management is turned off. 1 Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD.
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> 1 Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see Power Management Modes). 1 In OSD Menu, under OTHER SETTINGS, select Enable LCD Conditioning. Using this option may take several hours before the image is eliminated. 1 Alternatively, use a dynamically changing screensaver.

Video Problems


Common Symptoms	What You Experience	Possible Solutions
No Video	No signal indicator is displayed	<ul style="list-style-type: none"> 1 Check Video Input Selection. <ul style="list-style-type: none"> o Composite: Yellow colored RCA jack. o S-Video: Typically a round 4 pin jack. o Component: Red, Blue, Green colored RCA jacks.
Low Quality DVD playback	Picture not crisp and some color distortion	<ul style="list-style-type: none"> 1 Check DVD connection and use the best available video cable. <ul style="list-style-type: none"> o Composite gives good picture. o S-Video gives better picture. o Component gives the best picture.
Blinking Video	Video is blinking or discontinuous	<ul style="list-style-type: none"> 1 Check DVD connection and use the best available video cable. <ul style="list-style-type: none"> o Composite gives good picture. o S-Video gives better picture. o Component gives the best picture. 1 Check if DVD player is HDCP compliant. <ul style="list-style-type: none"> o Some non-compliant players may exhibit blinking video and others will display a raster screen (image larger or smaller than the screen).

 **NOTE:** When choosing S-Video, Composite or Component video, Auto Adjust function is not available.

Product Specific Problems

Common Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"> 1 Check the Scaling Ratio setting in Image Setting OSD 1 Reset the monitor to Factory Settings.

Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"> 1 Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.
The monitor will not go into power saving mode.	No picture, the LED light is blue. When press "+", "-", or "Menu" key, the message "No S-Video input signal", "No Composite input signal" or "No Component input signal" appears	<ul style="list-style-type: none"> 1 Move mouse or hit any key on the keyboard or activate the video player, then access the OSD to set Audio to off state.
No Input Signal when user controls are pressed	No picture, the LED light is blue. When press "+", - or Menu key, the message No S-Video input signal, No Composite input signal, or No Component input signal appears	<ul style="list-style-type: none"> 1 Check the signal source. Ensure the Computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. 1 Check to make sure Video Source to S-Video, Composite or Component is powered and playing video media. 1 Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary. 1 Reset the computer or video player.
The picture does not fill the entire screen.	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"> 1 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.

 **NOTE:** When choosing DVI-D mode, the **Auto Adjust** function is not available.

Universal Serial Bus (USB) Specific Problems


Common Symptoms	What You Experience	Possible Solutions
USB interface is not working	USB peripherals are not working	<ul style="list-style-type: none"> 1 Check that your monitor is turned ON. 1 Reconnect the upstream cable to your computer. 1 Reconnect the USB peripherals (downstream connector). 1 Switch off and then turn on the monitor again. 1 Reboot the computer. 1 Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.
High Speed USB 2.0 interface is slow.	High Speed USB 2.0 peripherals working slowly or not working at all	<ul style="list-style-type: none"> 1 Check that your computer is USB 2.0-capable. 1 Some computers have both USB 2.0 and USB 1.1 ports. Ensure that the correct USB port is used. 1 Reconnect the upstream cable to your computer. 1 Reconnect the USB peripherals (downstream connector). 1 Reboot the computer.

Troubleshooting the Dell™ Soundbar

Common Symptoms	What You Experience	Possible Solutions
No Sound	No power to Soundbar - the power indicator is off (built-in DC power supply. i.e. 3008WFP)	<ul style="list-style-type: none"> 1 Turn the Power/Volume knob on the Soundbar clockwise to the middle position; check if the power indicator (green LED) on the front of the Soundbar is illuminated. 1 Ensure that the power cable from the Soundbar is plugged into the monitor. 1 Ensure that the monitor has power. 1 If the monitor has no power, see Monitor Specific Troubleshooting for monitor common problem.
No Sound	Soundbar has power - power indicator is on	<ul style="list-style-type: none"> 1 Plug the audio line-in cable into the computer's audio out jack. 1 Set all volume controls to their maximum and ensure that the mute option is not enabled. 1 Play some audio content on the computer (example, audio CD, or MP3). 1 Turn the Power/Volume knob on the Soundbar clockwise to a higher volume setting. 1 Clean and reseal the audio line-in plug. 1 Test the Soundbar using another audio source (For example: portable CD player, MP3 player).
Distorted Sound	Computer's sound card is used as the audio source	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card. 1 Set all Windows volume controls to their midpoints. 1 Decrease the volume of the audio application. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting. 1 Clean and reseal the audio line-in plug. 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (For example: portable CD player, MP3 player). 1 Avoid using an audio cable extension or audio jack converter.
Distorted Sound	Other audio source is used	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the audio source. 1 Decrease the volume of the audio source. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting. 1 Clean and reseal the audio line-in plug.
Unbalanced Sound Output	Sound from only one side of Soundbar	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card or audio source. 1 Set all Windows audio balance controls (L-R) to their midpoints. 1 Clean and reseal the audio line-in plug.

		<ul style="list-style-type: none"> 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (For example: portable CD player, MP3 player).
Low Volume	Volume is too low	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Turn the Power/Volume knob on the Soundbar clockwise to the maximum volume setting. 1 Set all Windows volume controls to their maximum. 1 Increase the volume of the audio application. 1 Test the Soundbar using another audio source (For example: portable CD player, MP3 player).

Troubleshooting the Card Reader

 **NOTICE:** Do not remove the media while the Card reader is reading or writing to the media. Doing so may cause loss of data or malfunction in the media.

Common Symptoms	What You Experience	Possible Solutions
Drive letter is not assigned (Microsoft Windows XP™ only)	Conflict with network drive letter	<ul style="list-style-type: none"> A. Right-click My Computer on the desktop, and then click Manage. Under Computer Management, click Disk Management. B. In the list of drives in the right panel, right-click Removable Device and then click Change Drive Letter and Paths. C. Click Change, and in the drop-down box, specify a drive letter for the Removable Device, choose one that is not assigned to a mapped network drive. D. Click OK, and then click OK again.
Drive letter is assigned, but the media is not accessible	The media needs reformatting	<ul style="list-style-type: none"> 1 Right-click the drive in Explorer and choose Format from the resulting menu. <p>NOTICE: Formatting the media erases the contents.</p> <ul style="list-style-type: none"> 1 Test the card reader using another media or test the media on another card reader to ensure the media is not defective.
The media is removed during writing or erasing.	<p>Computer prompts this error message during erasing.</p> <p>Error copying file or folder OR</p> <p>Cannot write folder (folder name) or file (file name), during writing, or, Cannot remove folder (folder name) or file (file name)</p>	<ul style="list-style-type: none"> 1 Reinsert the media and write or erase again. 1 While erasing, you cannot write or erase in the same folder or file name. 1 The media may be corrupted, format the media and try again. <p>NOTICE: Formatting the media erases the contents.</p>
The media is removed while the LED is still blinking although the write/delete status window has disappeared.	Although the write/delete status window disappears, the writing/deleting action on the media may not have been completed if the LED is blinking.	<ul style="list-style-type: none"> 1 Reinsert the media and write or erase again. 1 The media may be corrupted, format the media and try again. <p>NOTICE: Formatting the media erases the contents.</p>
Cannot format or write on the media.	Write-protect switch is enabled	Verify that the write-protect switch of the media is unlocked.

[Back to Contents Page](#)