


REAR COIL SPRING

COMPONENTS

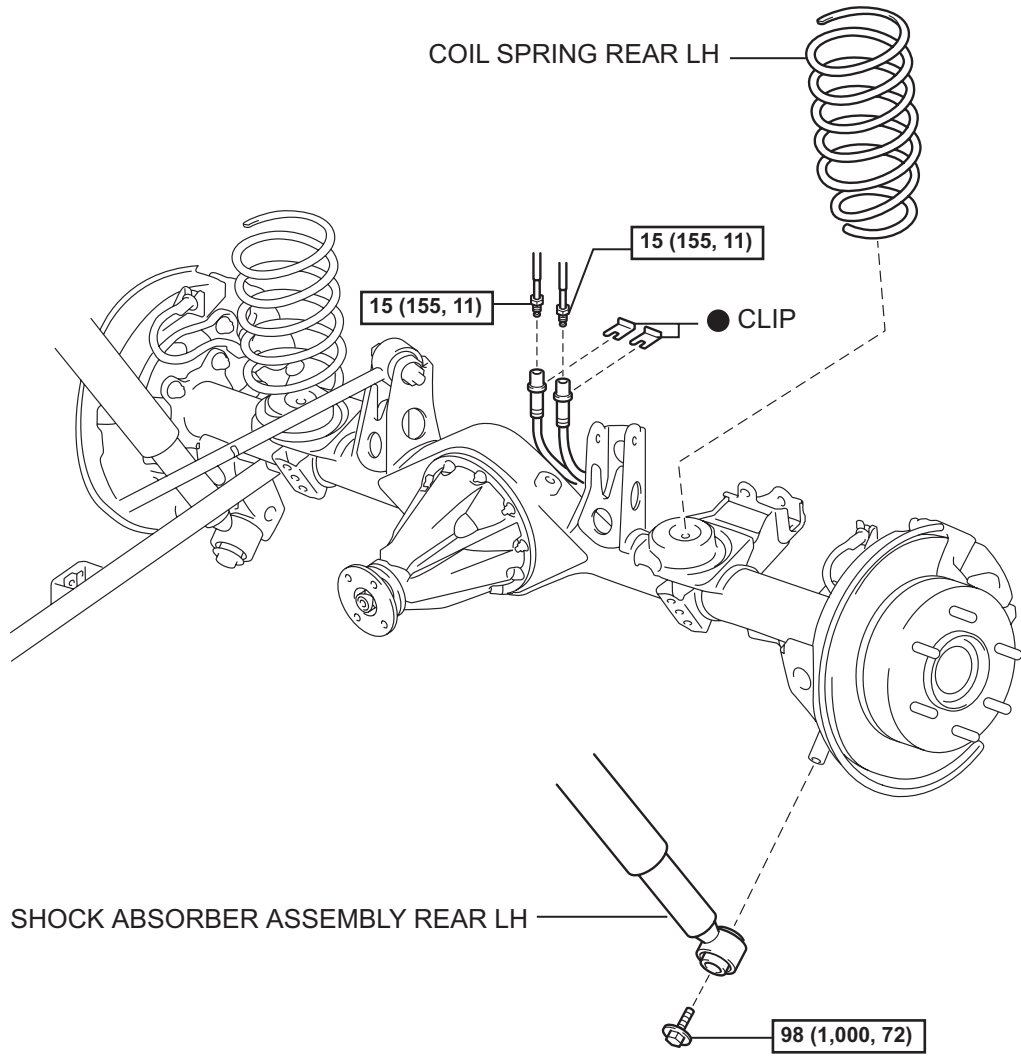

SP

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


N

C119735E01

REMOVAL

1. REMOVE REAR WHEEL
2. SEPARATE SHOCK ABSORBER ASSEMBLY REAR LH

- (a) Support the rear axle housing.
- (b) Remove the bolt, separate the shock absorber assembly rear LH from the rear axle.

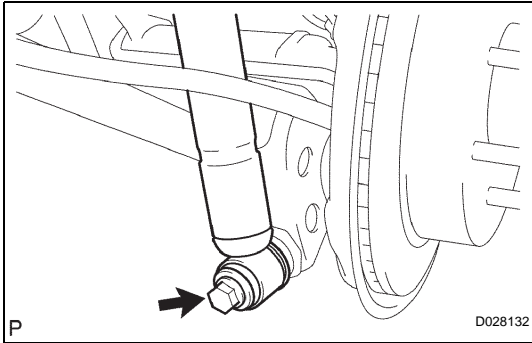


3. DISCONNECT REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Using SST, disconnect the 2 rear brake tubes from each of the flexible hoses. Use a container to catch brake fluid as it drains out.

SST 09023-00101

- (b) Remove the 2 clips and disconnect the 2 flexible hoses.

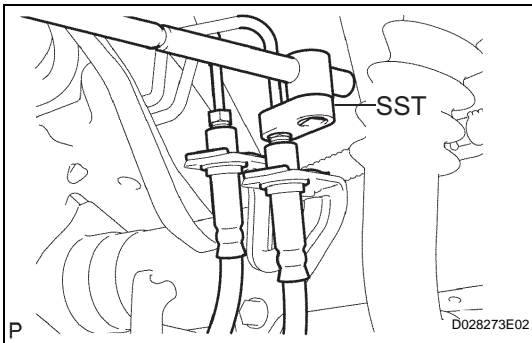

4. REMOVE COIL SPRING REAR LH

- (a) Start to lower the rear axle housing.

NOTICE:

Be careful not to snap the brake line and parking brake cable.

- (b) While lowering the rear axle housing, remove the coil spring rear LH.


INSTALLATION

1. INSTALL COIL SPRING REAR LH

- (a) Install the coil spring rear LH to the rear axle housing.

HINT:


Fit the lower end of the coil spring into the gap of the spring lower seat

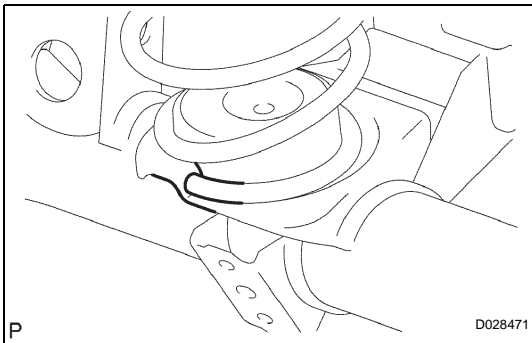


2. CONNECT SHOCK ABSORBER ASSEMBLY REAR LH

- (a) Install the shock absorber, temporarily tighten the bolt.


3. STABILIZE SUSPENSION (See page [SP-39](#))

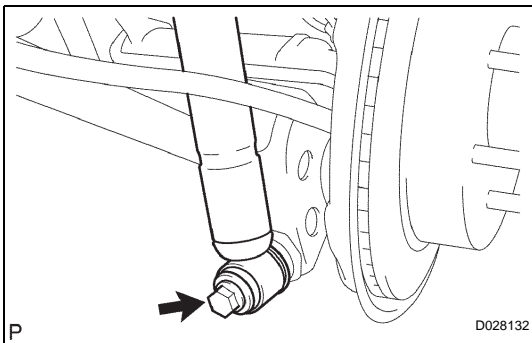

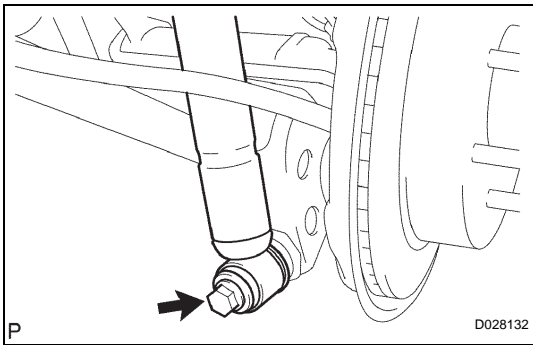

4. FULLY TIGHTEN SHOCK ABSORBER ASSEMBLY REAR LH

- (a) Fully tighten the bolt.
Torque: 98 N*m (1,000 kgf*cm, 72 ft.*lbf)

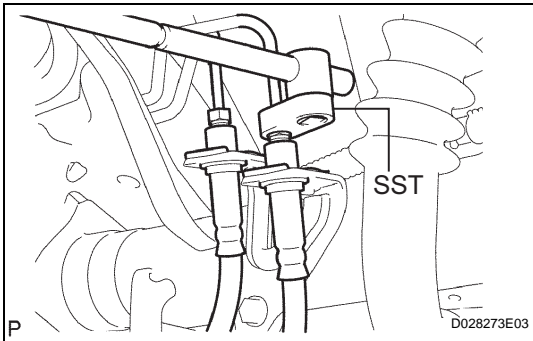

5. CONNECT REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Install the 2 clips with the 2 flexible hoses.
 (b) Using SST, connect the break tubes to the flexible hose.

Torque: 15 N*m (155 kgf*cm, 11 ft.*lbf)
SST 09023-00101

6. FILL RESERVOIR WITH BRAKE FLUID

7. BLEED BRAKE LINE

8. CHECK FLUID LEVEL IN RESERVOIR

9. CHECK BRAKE FLUID LEAKAGE

10. INSTALL REAR WHEEL

Torque: 112 N*m (1,137 kgf*cm, 83 ft.*lbf)